

UHS Battery Burnisher
PE300BU



Instructions For Use

Failure to read and understand this manual before operating this machine or performing service on this machine may result in injury to the operator or nearby personnel or result in damage to the machine or nearby property. Each operator must be trained in the operation of this machine before being allowed to use it.

Contact Amano Pioneer Eclipse Customer Service at 1-800-367-3550 or 1-336-372-8080 or an authorized Amano Pioneer Eclipse Distributor to inquire about training or to request a replacement manual.

NOTICE

Proper maintenance is necessary with all battery powered floor machines. Following the scheduled maintenance procedures found in your operation manual will provide many years of uninterrupted service.



In addition to the scheduled maintenance procedures listed it is recommended to have your machine serviced by certified service personnel every three months.

Pioneer Eclipse®

FOR YOUR SAFETY

Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.

Record This Important Information

Date of Purchase _____

Purchased From _____

Address _____

City _____ State _____ Zip _____

Phone _____ Contact _____

Machine Model _____

Machine Serial Number _____

Important Phone Numbers

Medical Emergency _____

Police _____

Fire Department _____

In this Operation Manual you will find three statements that you must read and observe to ensure safe operation of this machine.

DANGER! indicates that the possibility of severe bodily injury or death can occur if DANGER! statements are ignored. Read and observe all DANGER! statements included in the Operation Manual and attached to the machine.

WARNING! indicated that the possibility of bodily injury to the operator and other people can occur if WARNING! statements are ignored. Read and observe all WARNING! statements included in the Operation Manual and attached to the machine.

CAUTION! indicates that the possibility of damage to the machine or other property can occur if CAUTION! statements are ignored. Read and observe all CAUTION! statements included in the Operation Manual and attached to the machine.

Contents

Machine Specifications.....	4	Stopping and Turning Off Machine.....	13
Routine Maintenance Parts.....	5	Installing/Changing Burnishing Pad.....	13
Safety Precautions.....	6	Dust Bag Removal.....	14
Operator Responsibility.....	7	Pad Pressure Adjustment.....	14
Operator-Ear Sound Pressure Level.....	7	Storage.....	14
Hand-Arm Vibration.....	7	Operation on Inclines.....	14
Machine Preparation.....	8	Post-Operation Check List.....	14
Unpacking the Machine.....	8	Lubrication of Rear Casters.....	14
Connecting the Batteries.....	8	Caster Parking Brake.....	14
Installing Steel Skirt.....	8	Body Maintenance.....	15
Machine Operation.....	9	Battery Maintenance.....	15
Controls and Instruments.....	9	Lead Acid Batteries.....	15
300BU Traction Model.....		Repacking the Machine.....	15
Key Switch.....	10	Transporting the Machine.....	15
Handle Lever.....	10	Maintenance.....	16
Burnish Switch.....	10	Maintenance Chart.....	16
Reverse Switch.....	10	Machine Troubleshooting.....	17
Traction Speed Control.....	10	Alarm Codes.....	18
Hour Meter/Battery Discharge Indicator.....	10	Exploded Views and Parts Lists	
Alarm LED.....	10	Wiring Schematic (Non-Traction).....	19
300BU Non-Traction Model.....		Wiring Schematic (Traction).....	20
Key Switch.....	10	Connections (Non-Traction).....	21 & 22
Handle Lever.....	10	Connections (Traction).....	23 & 24
Burnish Switch.....	10	Sub Assembly.....	25
Hour Meter/Battery Discharge Indicator.....	10	Final Bottom Assembly (Non- Traction).....	27
Over Current Protection.....	10	Final Bottom Assembly (Traction).....	29
Onboard Battery Charger.....	11	Final Rear Assembly.....	31
Battery Charger Fault Codes.....	12	Final Top Assembly.....	33
How The Machine Works.....	13	Final Front Assembly.....	35
Pre-Operation Check List.....	13	Warranty.....	39
Turning on the Machine.....	13		
Changing Direction.....	13		

Machine Specifications

VOLTAGE:36 VDC (3 - 12 VDC Batteries)

BATTERIES:.....12 VDC Lead Acid 228 Ah
12 VDC AGM 235 Ah

BURNISHING RATE:.....±26,000 ft²/hr (2415 m²/hr)

BURNISH WIDTH:.....20 in (51 cm)

BURNISH PAD:.....20 in (51 cm)

PAD SPEED:.....2000 rpm

PAD PRESSURE:.....Adjustable

FORWARD SPEED (Traction Only):.....3.25 mph (5.23 km/h)

REVERSE SPEED: (Traction Only).....1.5 mph (2.4 km/h)

BURNISH MOTOR:.....PM 2.5 hp

TRANSAXLE (Traction Only).....1/4hp (186 watt)

BATTERY CHARGER:.....On-Board 36VDC 25A

WHEELS:.....8 in. (20.3 cm) Solid

NOISE LEVEL:.....<70 dB

VIBRATION LEVEL:.....Less than 2.5 m/s²

WEIGHT (W/O BATTERIES):.....260 lb (132 kg)

WEIGHT (228 AH BATTERIES):.....620 lb (281 kg)

OVERLOAD PROTECTION:.....Resettable Breakers

OPERATING TIME:.....Approximately 3 hrs

LENGTH:.....49 in (124cm) Head Up
58 in (147cm) Head Down

FRAME WIDTH:.....22 in (56 cm)

HEIGHT.....45 in (114 cm)

Routine Maintenance Parts

- Pads
 - 20" Blue Blend: PD3LBB20
 - 20" Natural Poly-Blend: PD3LNP20
 - 20" White Lightning: PD3LWL20
- Cloth Dust Bag: MP414100
- Paper Dust Bag (3 per pack): MP414200
- Pad Driver: MP414000
- Pad Driver Center Device: MP432400
- 3A Glass Fuse: MP234700
- 20A Charger Fuse: MP265100
- 20" Steel Skirt: MP425200
- Skirt Edge (5.688ft): MP139800
- Lead Acid 12V 228AH Battery: MP223500
- Sealed 12V AGM Battery: MP413600
- Gas Spring: MP415200
- Burnish Motor Brushes: MP433200
- Transaxle Motor Brush: MP433300

Safety Precautions

Anyone operating the machine should read the following carefully and be informed of potentially dangerous operating conditions. Operators should be familiar with the location and use of all safety devices on the machine. Do not use the machine if it is not in proper operating condition, and report any damage or operation faults immediately.

DANGER! This machine has parts including the pad/brush assemblies that can cause severe injury if these parts are contacted while they are moving. Do not allow any part of the body or clothing to come in contact with these parts while they are moving. Do not try to change the pads/brushes while the machine is running. Do not allow other people to come near the machine while it is in operation. Do not allow the machine to run unattended. Do not leave the machine in a place where unauthorized or untrained personnel could use the machine. Do not run the machine with the pads/brushes off center, damaged or missing. Do not operate the machine if the machine has loose parts.

WARNING! Batteries emit hydrogen gas. Explosion or fire can result. Keep sparks and open flame away. Keep covers open when charging. Do not smoke around batteries. Avoid skin contact with the acid contained in the batteries. Never allow metal objects to lay across battery tops.

WARNING! Operate from the rear of the machine only.

WARNING! Inspect pad holders regularly. A fractured pad holder may result in pad fragments causing injury.

WARNING! Use caution when operating the machine on a ramp or incline. Do not turn the machine, or leave it unattended, on a ramp or incline.

WARNING! Store machine inside. Keep the electrical components of the machine dry. **DO NOT PRESSURE WASH MACHINE.**

WARNING! Modifications or alterations to this machine can lead to personal injury or damage to the machine. Do not make unauthorized modifications or alterations to this machine. Amano Pioneer Eclipse assumes no liabilities for injury or damage resulting from an unauthorized modification or alteration to the machine. Any unauthorized modification or alteration to this machine voids all warranties.

WARNING! The motor and motor controller become hot enough while the machine is in operation, and for a long time after the machine is shut off, to cause severe burns. Do not touch these parts of the machine until they have cooled.

WARNING! Injury can occur to the eyes and body while using the machine. Safety goggles, safety shoes, and safety clothing are recommended while operating the machine.

WARNING! Machine vibration may cause tingling or numbness in the fingers or hands. Gloves are recommended to reduce machine vibration. If tingling or numbness persists, shut off the machine. If the vibration is caused by loose parts such as an off center pad/brush, adjust or tighten these parts before using the machine again.

WARNING! Do not burnish on an incline. This machine is designed to burnish on a flat level floor.

CAUTION! Do not operate machine unless trained and authorized. Do not operate machine unless you have read and understand the operation manual. Do not operate machine in flammable or explosive areas.

CAUTION! Before starting machine ensure all safety devices are in place and functioning properly. Before starting machine check for proper operation.

CAUTION! When using machine, go slowly on inclines or slippery surfaces. Use care when operating machine in reverse. Follow all manufacturers instructions on chemical product containers when handling, mixing, or using chemical products.

CAUTION! When servicing machine, stay clear of moving parts. Do not wear loose clothing when working on machine. Block machine wheels before raising or jacking up machine. Use hoist stands that will support the weight of the machine. Wear eye and ear protection when using pressurized air. Disconnect battery connections before servicing machine. Use only replacement parts supplied by Amano Pioneer Eclipse or a Amano Pioneer Eclipse Authorized Distributor or Service Center.

This machine is manufactured for commercial use only.

This machine is designed and manufactured for burnishing indoor hard floor surfaces. Amano Pioneer Eclipse does not recommend use of this machine in any environment other than an indoor environment.

Battery powered floor equipment is designed and manufactured for commercial use only. These machines are designed to burnish most modern types of floors including composition tile, stone, marble, terrazzo, and resilient floor covering, and some coated wood floors.

Operator Responsibility

The operator is responsible for performing the recommended daily maintenance and checkups of the machine to keep it in good working condition. The operator must inform the service mechanic or supervisor when recommended maintenance procedures are required as prescribed in the MAINTENANCE section of this manual.

Read this manual carefully before operating this machine.

FOR SAFETY: Do not operate machine before reading and understanding the operation manual.

Check the machine for shipping damage.

Keep your machine regularly maintained by following the maintenance information in this manual. We recommend taking advantage of a service contract from your Amano Pioneer Eclipse Authorized Distributor or Service Center.

Order parts and supplies only from an Authorized Amano Pioneer Eclipse Distributor. Use the parts illustration section of your manual when ordering parts.

During and after operation, perform the recommended daily and hourly procedures outlined in the Maintenance Chart.

Test for Operator-Ear Sound Pressure Level

Amano Pioneer Eclipse measures and rates the operator-ear sound pressure level for hand-guided floor treatment and floor cleaning machines for industrial use. All tests are performed in accordance with European Machinery Directive (98/37/EC).

- Outdoor test area consists of a flat open space free from effects of signboards, buildings or hillsides for at least 15m (50ft) from the center of the test surface. Indoor tests are conducted in a semi-anechoic or sound deadening room.
- The test surface is a single sheet of floor covering at least 1m (3.3ft) wider and longer than the equipment being tested. In order to not affect the sound reading, the observer taking readings is at least 2m (6.6ft) from the equipment being tested, or standing directly behind the operator.
- All machines are tested while stationary and centered on the test surface. With the traction drive in neutral (where applicable) the test is conducted with the machine at maximum engine or motor speed as specified by the manufacturer.
- The operator is located in the normal operating position with the microphone or meter supported independent of the machine, 1,68m (66in) above the test surface, 25cm (10in) to the right and left centerline of the operators position, and 20cm (8in) to the rear most point of the handle, with the handle in the most forward position.
- The sound level meter is observed for a minimum of 5 seconds or until a stabilized reading is obtain. The maximum repeatable sound level observed during the test at each microphone position is recorded and documented.

Test for Hand-Arm Vibration at the Grip Surface of Hand-Guided Machinery

Amano Pioneer Eclipse measures and rates the vibration at the machine-hand contact surface of hand-guided machines that are provided with handles in accordance with European Machinery Directive (98/37/EC).

- The test area consists of a flat open floor area that allows the machine to be operated normally
- The transducer is mounted firmly at a point halfway along the length of the handle where the handle would normally be held.
- Machines are tested while stationary, with all mechanisms necessary for the equipment to perform its intended functions engaged and the traction drive in neutral (if applicable). The machine will be tested at maximum engine or motor speed as specified by the manufacturer of the subject machine.
- The measurements are recorded from the dominant axis.


Machine Preparation

Unpacking the Machine

1. Cut and remove green bands holding the box to the pallet.
2. Remove staples attaching the box to the platform at the edge of the box.
3. With two people, one at either end of the box, lift box straight up and off the machine.
4. Remove loose accessories from the top of machine.
5. Cut and remove the bands across the top of the machine and across the burnish head. Lower the attached ramp.
6. If the machine has batteries then remove the battery cover and plug the battery pack plug into the machine, turn on the key, drive the machine down the ramp off the pallet. If the machine does not have batteries, pull the machine down the ramp and off the pallet. See the "Connecting the batteries" section of the manual.


Connecting the Batteries

1. Place the batteries in the machine oriented as shown in diagram.
2. Connect the batteries as shown in the battery connection diagram.
3. **DANGER! Incorrect connection of batteries can cause explosion and/or serious injury.**
4. Double check battery connections.
5. Connect the battery pack plug to the machine.

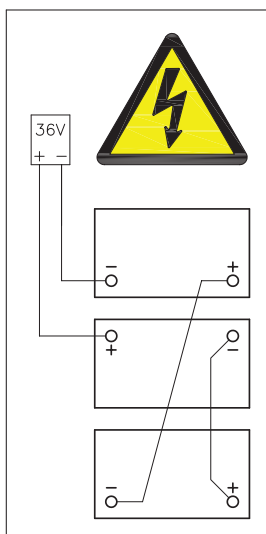

Installing Steel Skirt

1. Lift the deck upward about 90 degrees by pulling up on the front of the deck. At this point, the tilt latch will hold the deck in the pad change position. (Ref. Machine Operation - Installing/Changing Burnishing Pad)
2. Remove steel skirt from bubble wrap packing and on the outside of the skirt, loosen the 1/4" hex bolt with jam.
3. Slide the skirt onto the burnish head aligning the slots in the skirt with the tabs on the deck. Make sure the 1/4" bolt is at the back of the shroud.


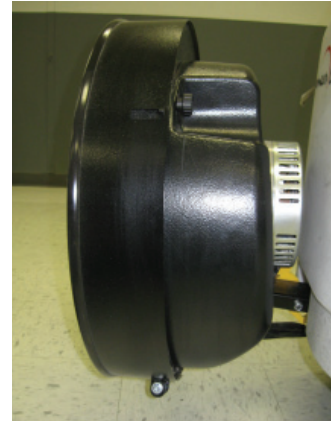


4. Tighten the 1/4" bolt until the skirt is snug around the deck but also floats up and down freely.
5. Tighten jam nut and lower deck to burnish position. (Ref. Machine Operation: Installing / Changing Burnishing Pad)



Machine Operation

Controls and Instruments

Traction

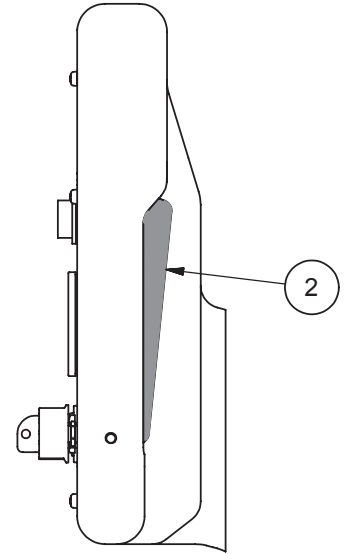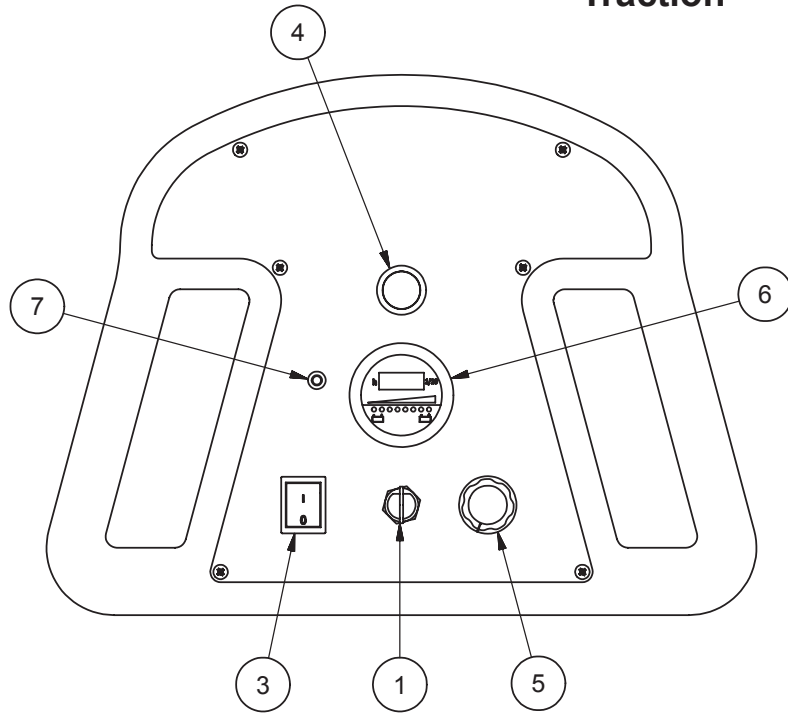

Non-Traction

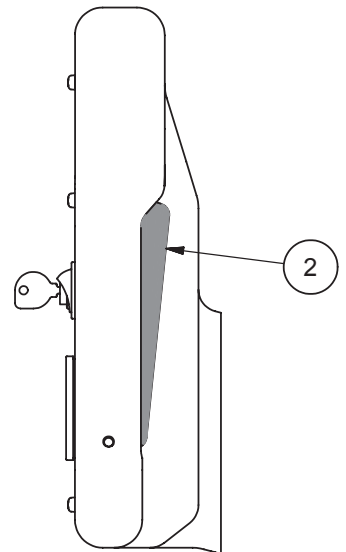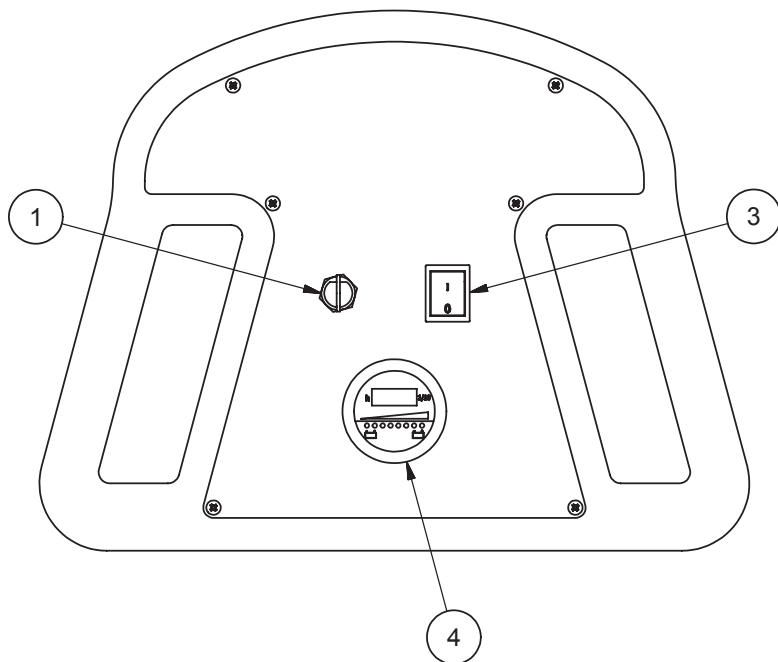

Controls and Instruments

300BU Traction Model

1. **Key Switch** - Turns the machine on/off.
2. **Handle Lever** - When the lever is engaged the machine will move forward. If the Burnish switch is on, the pad will also start turning. If the burnish head is tilted up into the pad change position, the burnish motor will not engage.
3. **Burnish Switch** - Turns burnish function on/off. The burnish motor will not engage unless the burnish switch is on and the handle lever is engaged. If the burnish head is tilted up into the pad change position, the burnish motor will not engage.
4. **Reverse Switch** - Hold down this switch while the handle lever is engaged and the machine will move in reverse. Once the reverse switch is released the machine will start moving forward.
5. **Traction Speed Control** - Turn the knob clockwise to increase speed. Turn the knob counter-clockwise to decrease speed.
6. **Hour Meter / Battery Discharge Indicator** - The LCD displays the number of burnishing hours. The machine will only count hours while burnishing. The row of LEDs display the charge level of the battery pack. When all the yellow LEDs are lit, the battery pack is fully charged. In order to protect the battery pack, when the red LED is lit, the burnish motor will stop and the machine should be recharged.
7. **Alarm LED** - Displays trouble codes as a blink pattern. In normal operation this LED will be off. If it comes on, refer to the troubleshooting section.

300BU Non-Traction Model

1. **Key Switch** - Turns the machine on/off.
 2. **Handle Lever** - When the lever is engaged, if the Burnish switch is on, the pad will start turning. If the burnish head is tilted up into the pad change position, the burnish motor will not engage.
- Note:** *The machine needs to be moving when the burnish motor comes on in order to keep from burning the floor.*
3. **Burnish Switch** - Turns burnish function on/off. The burnish motor will not engage unless the burnish switch is on and the handle lever is engaged. If the burnish head is tilted up into the pad change position, the burnish motor will not engage.

4. **Hour Meter / Battery Discharge Indicator** - The LCD displays the number of burnishing hours. The machine will only count hours while burnishing. The row of LEDs display the charge level of the battery pack. When all the yellow LEDs are lit the battery pack is fully charged. In order to protect the battery pack, when the red LED is lit the burnish motor will stop and the machine should be recharged.

Over Current Protection

1. 70A Breaker - Over current protection for the Burnish Motor. Push to reset.
2. 40A Breaker - Over current protection for the Traction Drive. Push to reset (Only on Traction models).



3. 3A fuse In-Line holder - Over current protection for key switch.

Onboard Battery Charger

To charge the batteries, first drive the machine to a flat, dry, well-ventilated area then turn the machine off. If using lead acid batteries, check the water level in all the battery cells. If the level is low, **add just enough distilled water to cover the plates.**

DO NOT OVERFILL.

Then plug the charger cord into a wall socket. The battery charger will initialize and then soft start the charging cycle.

WARNING! Batteries emit hydrogen gas when charging. Explosion or fire can result. Keep sparks and open flame away when charging.


CAUTION! When servicing machine, wear protective gloves and goggles when handling batteries or battery cables. Avoid contact with battery acid.

Battery Charger Controls:

1. Three-digit display + symbol (1), to view A=charging current, U=battery voltage, h=charging time, C=charging ampere-hours (AH), E=energy used to charge (KWh)
2. Button for the Selection of the display mode (2): A, U, h, C, E. After 10 seconds the display returns to the display of charging current.
3. Red control indicator (3): when it is on, the charging cycle has started.
4. Yellow control indicator (4): when it is on, the final phase of the charging cycle has started.
5. Green control indicator (5): when it is on, the charging cycle has finished.

Once the charge cycle is complete, the charger will remain active in a trickle charge mode to maintain the charge on the batteries until the charger is unplugged from the wall socket.

**FRONT PANEL OF BATTERY CHARGER MODEL
CBHF2**

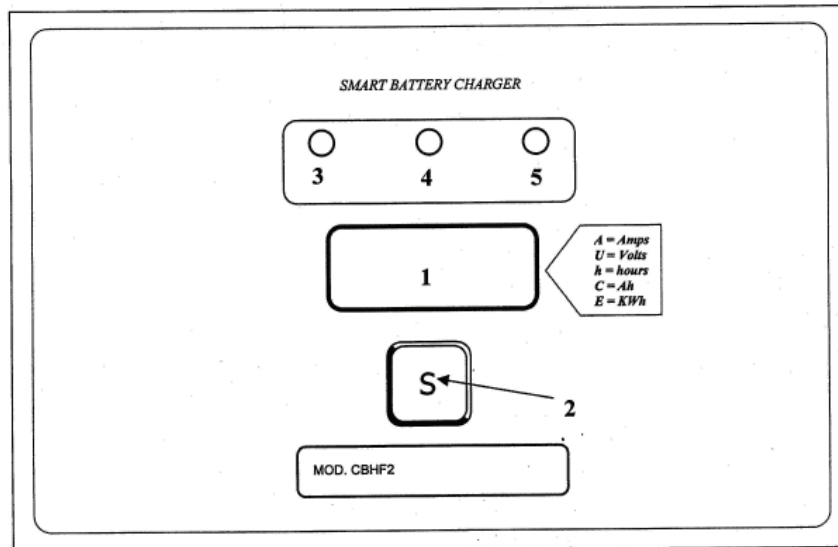

Battery Charger Fault Codes

Fault	Description	Remedy
No Display	No display on the charger, no LED indicators.	Check that the plug is connected to an operating wall outlet. Check fuse. 20A fuse MP265100.
<i>bat</i>	Incorrect battery connection or no battery connection.	Check the connection and the polarity of the battery connection.
<i>EO1</i>	The maximum voltage admissible by the battery has been exceeded. The charge cycle was interrupted.	Restart the charge cycle. If problem persists, battery pack may be damaged.
<i>EO2</i>	The maximum temperature has been exceeded. The charge cycle was interrupted.	Restart the charge cycle. If problem persists, battery pack may be damaged.
<i>EO3</i>	The maximum time for the charging phase has been exceeded. The charge cycle was interrupted.	Restart the charge cycle. If problem persists, battery pack may be damaged.
<i>SEt</i>	The total safety time has interrupted the charge cycle.	Restart the charge cycle. If problem persists, battery pack may be damaged.
<i>SEt</i>	Internal charger fault.	Replace battery charger.

How the Machine Works

The Burnish components of the machine are:

- Burnish pad holder
- Burnish pad
- Burnish motor
- Dust Collection Bag

As the machine moves forward, the burnish pad shines the floor. Any excess dirt or wax gets picked up by the pad and distributed into the dust collection bag via the dust collection system.

Pre-Operation Checklist

Before operating the machine:

- Check that the Burnish Switch is in the off position.
- Check the pad holder to ensure there are no breaks or cracks.
- Check correct connection of the batteries.
- Check that the Dust Collection Bag is empty.
- Release caster breaks.

Turning on the Machine

1. Complete pre-operation check.
2. Turn the Key to the ON position.
3. Turn on the burnish switch and engage the handle levers.
4. Adjust speed as needed with traction speed control knob. (Traction Models Only)

Changing Direction


When the handle levers are engaged the machine will travel in the forward direction. To travel in reverse, while the handle levers are engaged, hold down the reverse switch. The machine will change from forward direction to reverse direction. The machine will continue in the reverse direction until the reverse switch is released.

Stopping and Turning Off Machine

To stop the machine, release the handle levers and the machine will smoothly break to a stop and after 3 seconds the burnish motor will stop. When turning the machine off, turn off the burnish switch and then turn off the key switch.

Installing/Changing Burnishing Pad


1. Make sure the Burnish Switch is OFF.
2. Lift on the front of the deck and tilt deck into the pad change position.

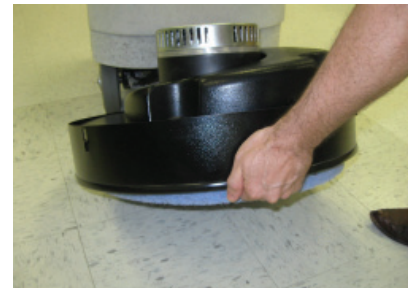

3. Remove the center device by turning counterclockwise and carefully remove the old pad from the Velcro material.

CAUTION! CAREFULLY INSPECT THE PAD HOLDER FOR CRACKS OR DAMAGE! REPLACE IF NECESSARY.

4. Pull center from new pad, align pad on pad holder and secure with centering device by turning clockwise.
5. Press pad firmly onto Velcro.

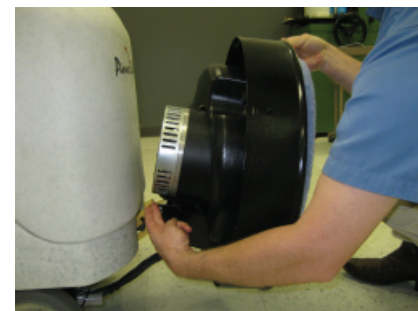

6. Lift the front of the shroud and lift the shroud release lever and SLOWLY let the shroud return to the down position.

CAUTION! KEEP HOLD OF THE DECK TO AVOID INJURY!

Dust Bag Removal

The machine has two dust bag options. A re-usable cloth bag and a disposable paper bag. Monitor the dust bag carefully and empty/change as needed. The dust collection system will not operate effectively when the dust bag is full. Under heavy burnishing conditions the dust bag should be emptied/changed every hour.

1. Turn off the Burnish Motor.
2. Unscrew the knobs holding the dust bag cover to the shroud.



3. Pull the dust bag off the dust tube.




4. Empty/Change dust bag.

Pad Pressure Adjustment

The pad pressure is set at the factory for optimal burnish performance in most conditions. If the pad pressure needs to be adjusted, follow the procedure outlined below.

Note: Pad pressure adjustments should only be performed by a qualified technician.

1. Turn burnish switch off.
2. Remove back panel.
3. Adjust ball end to increase or decrease pad pressure as shown in diagram.

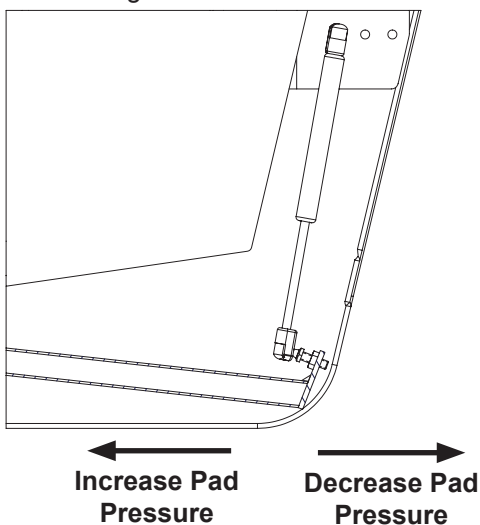

Storage

1. Machine should be stored in a dry environment.
2. Store machine away from objects that may fall and damage it.
3. Never store burnisher near an open flame or heat producing device.
4. Make sure burnisher is cleaned properly by wiping machine down with damp cloth before storing. CAUTION! NEVER PRESSURE WASH MACHINE!
5. Disconnect batteries before storage.

Operation on Inclines

CAUTION! When using the machine, go slowly on inclines.

CAUTION! Do not run burnish pad on an incline.

The maximum rated climb and descent incline is 6°.

Post Operation Checklist

Turn the machine OFF and perform the following checks:

- Check for wire, string, or twine wrapped around the burnish pad.
- Check Wire fray or damage.
- Empty the Dust Collection Bag.
- Inspect batteries.
- Plug in on-board battery charger.

Lubrication of Rear Casters

Each of the two rear casters has two grease fittings. Lubricate each caster with a grease gun every 100 hours of machine operation.



Caster Parking Brake

The two rear casters are equipped with brakes. To set the brake, push down the "ON" side of the brake lever. To release the brake push down the "OFF" side of the brake lever. The caster breaks should only be used as a parking brake if needed. Before moving the machine make sure both breaks are released.

Body Maintenance

The body may be cleaned with a damp cloth to remove dust and scuff marks. More stubborn scuff marks on the tank exterior can be removed with a vinyl cleaner.

Battery Maintenance

The batteries are deep cycle 12 volt batteries. The lifetime of the batteries is limited by the number of charges the batteries receive. To get the most life from the batteries, charge them when the battery discharge LED (Red) starts to blink (20% charge left). Use only the on-board battery charger supplied to charge the batteries.


Periodically clean the top surface of the batteries and the terminals, and check for loose connections. Use a strong solution of baking soda and water. Brush the solution sparingly over the battery tops, terminals, and cable clamps. **DO NOT ALLOW ANY BAKING SODA SOLUTION TO ENTER THE BATTERIES!** Use a wire brush to clean the terminal posts and cable connectors. After cleaning, apply a coating of clear battery post protectant to the terminals and the cable connectors. Keep the tops of the batteries clean and dry.

To prevent a possible short circuit, keep all metallic objects off the top of the batteries. Replace any worn or damaged wires.

Lead Acid Batteries

Never add acid to the batteries, only distilled water. Always keep the battery caps on, except when adding water or taking hydrometer readings.

Check the electrolyte level in each battery cell before and after charging, and after every 50 hours of operation. Do not charge the batteries unless the fluid is slightly above the battery plates. If needed, add just enough distilled water to cover the plates. **Never add acid to the batteries. Do not overfill.**

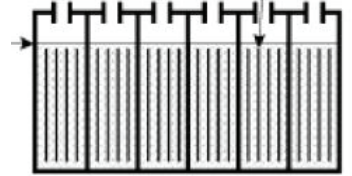

Measuring the specific gravity, using a hydrometer, is a way to determine the charge level and condition of the batteries. If one or more of the battery cells test lower than the other battery cell (0.050 or more), the cell is damaged, shorted, or is about to fail.

Sealed batteries no additional maintenance required.

CAUTION! When working with batteries, always wear eye protection and protective clothing.

CAUTION! Batteries emit Hydrogen Gas. **NO SMOKING!**

CAUTION! Battery damage will occur if the electrolyte level does not cover the battery plates.

CAUTION! Machine and/or battery damage can occur if the electrolyte level is above the bottom of the tube in each cell.

CAUTION! Never use tap water to fill battery cells. Tap water contains contaminants that will damage the battery. Only use distilled water to fill battery cells.

Repacking the Machine

Refer to Unpacking section on page 5 and repack machine using original packing materials and container.

Transporting the Machine

When shipping the machine, make sure the batteries are disconnected and the machine is secured in the transporting vehicle.

Maintenance

Operation	Interval						
	Daily	Every 20 Hrs	Every 25 Hrs	Every 50 Hrs	Every 100 Hrs	Every 200 Hrs	Every 1000 Hrs
Empty/Clean Dust Bag	●						
Inspect Pad Holder	●						
Inspect Battery water level (Lead Acid only)				●			
Check wiring harness for fray or cut			●				
Check for loose/missing nuts or screws	●						
Tighten nuts and screws					●		
Check brushes on transaxle motor and burnish motor							●
Lubricate rear casters					●		
Check Burnish motor ampere draw						●	

*These items must be performed with the proper tools and training. Contact a Amano Pioneer Eclipse Factory Certified Technician unless you have the proper equipment and mechanical proficiency.

Machine Troubleshooting


Problem	Possible Cause	Remedy
Machine will not turn on	Breaker Tripped (Traction only)	Push breaker button to reset
	Incorrect battery connection	Check batteries are wired together correctly via the battery connection diagram, check the Anderson connectors are plugged together
	On-board battery charger plugged in	Unplug the charging cord from the machine
	Key switch failure	Check key switch is functioning and wiring to the key switch is correct
	Failed Fuse	Check the fuse in the inline fuse holder.
Burnish motor will not start	Deck tilted into pad change position	Lower the deck to the burnish position
	Speed control knob turned all the way counter-clockwise (off) (Traction Model only)	Turn speed control knob clockwise to increase speed
	Burnish switch off	Turn on burnish switch
	Handle levers not engaged	Engage handle levers
	70A breaker tripped	Push 70A breaker to reset
	Battery lockout	Batteries need to be charged
Red LED Flashing on Dash (Traction Model Only)	Check alarm code reference sheet	Troubleshoot accordingly
Machine exhibits poor burnishing performance	Pad dirty	Remove debris or string/twine from pads; clean pad; replace pad
	Incorrect pad	Use more aggressive burnishing pad
	Pad worn down	Replace pad
Machine exhibits very aggressive burnish performance	Gas Spring faulty	Check ampere draw of burnish motor (should not be above 50 amps); replace gas spring
	Incorrect pad	Use less aggressive burnishing pad

Alarm Codes (Traction Model Only)


*Given the following alarm codes, troubleshooting should only be done by Amano Pioneer Eclipse Factory Certified Technician. A programming handset may be required for troubleshooting.

Number of Flashes	Description	Possible Cause
1 (fast)	Low Battery Voltage	The battery needs charging or there is a bad connection to the battery. Check the connections to the battery. If the connections are good, try charging the battery.
1 (medium)	Handle lever engaged at key on	Disengage the handle lever, key off and key back on to clear
1 (slow)	Machine Time Out	The machine has been left with the key on. Turn the key off and then back on again.
2	Motor Disconnected	The motor has a bad connection. Check all the connections and leads between the motor and the controller.
3	Motor Wiring Trip	The motor has a short circuit to a battery. Check all the connections and leads between the motor and the battery.
6	Inhibit Active	The controller is being inhibited from driving. Check the state of the Inhibit unputs.
7	Throttle Trip	A throttle trip is indicated. Make sure that the throttle is in the rest position before switching on the vehicle.
8	Possible Controller Trip	A possible controller trip is indicated. Make sure that all connections are secure.
9	Solenoid Brake Trip	The parking brakes have a bad connection. Check the parking brake and motor connections. Make sure the controller connections are secure.
10	High Battery Voltage	An excessive voltage has been applied to the controller. This is usually caused by a poor battery connection. Check the battery connections.

Electrical Schematic (Non-Traction)

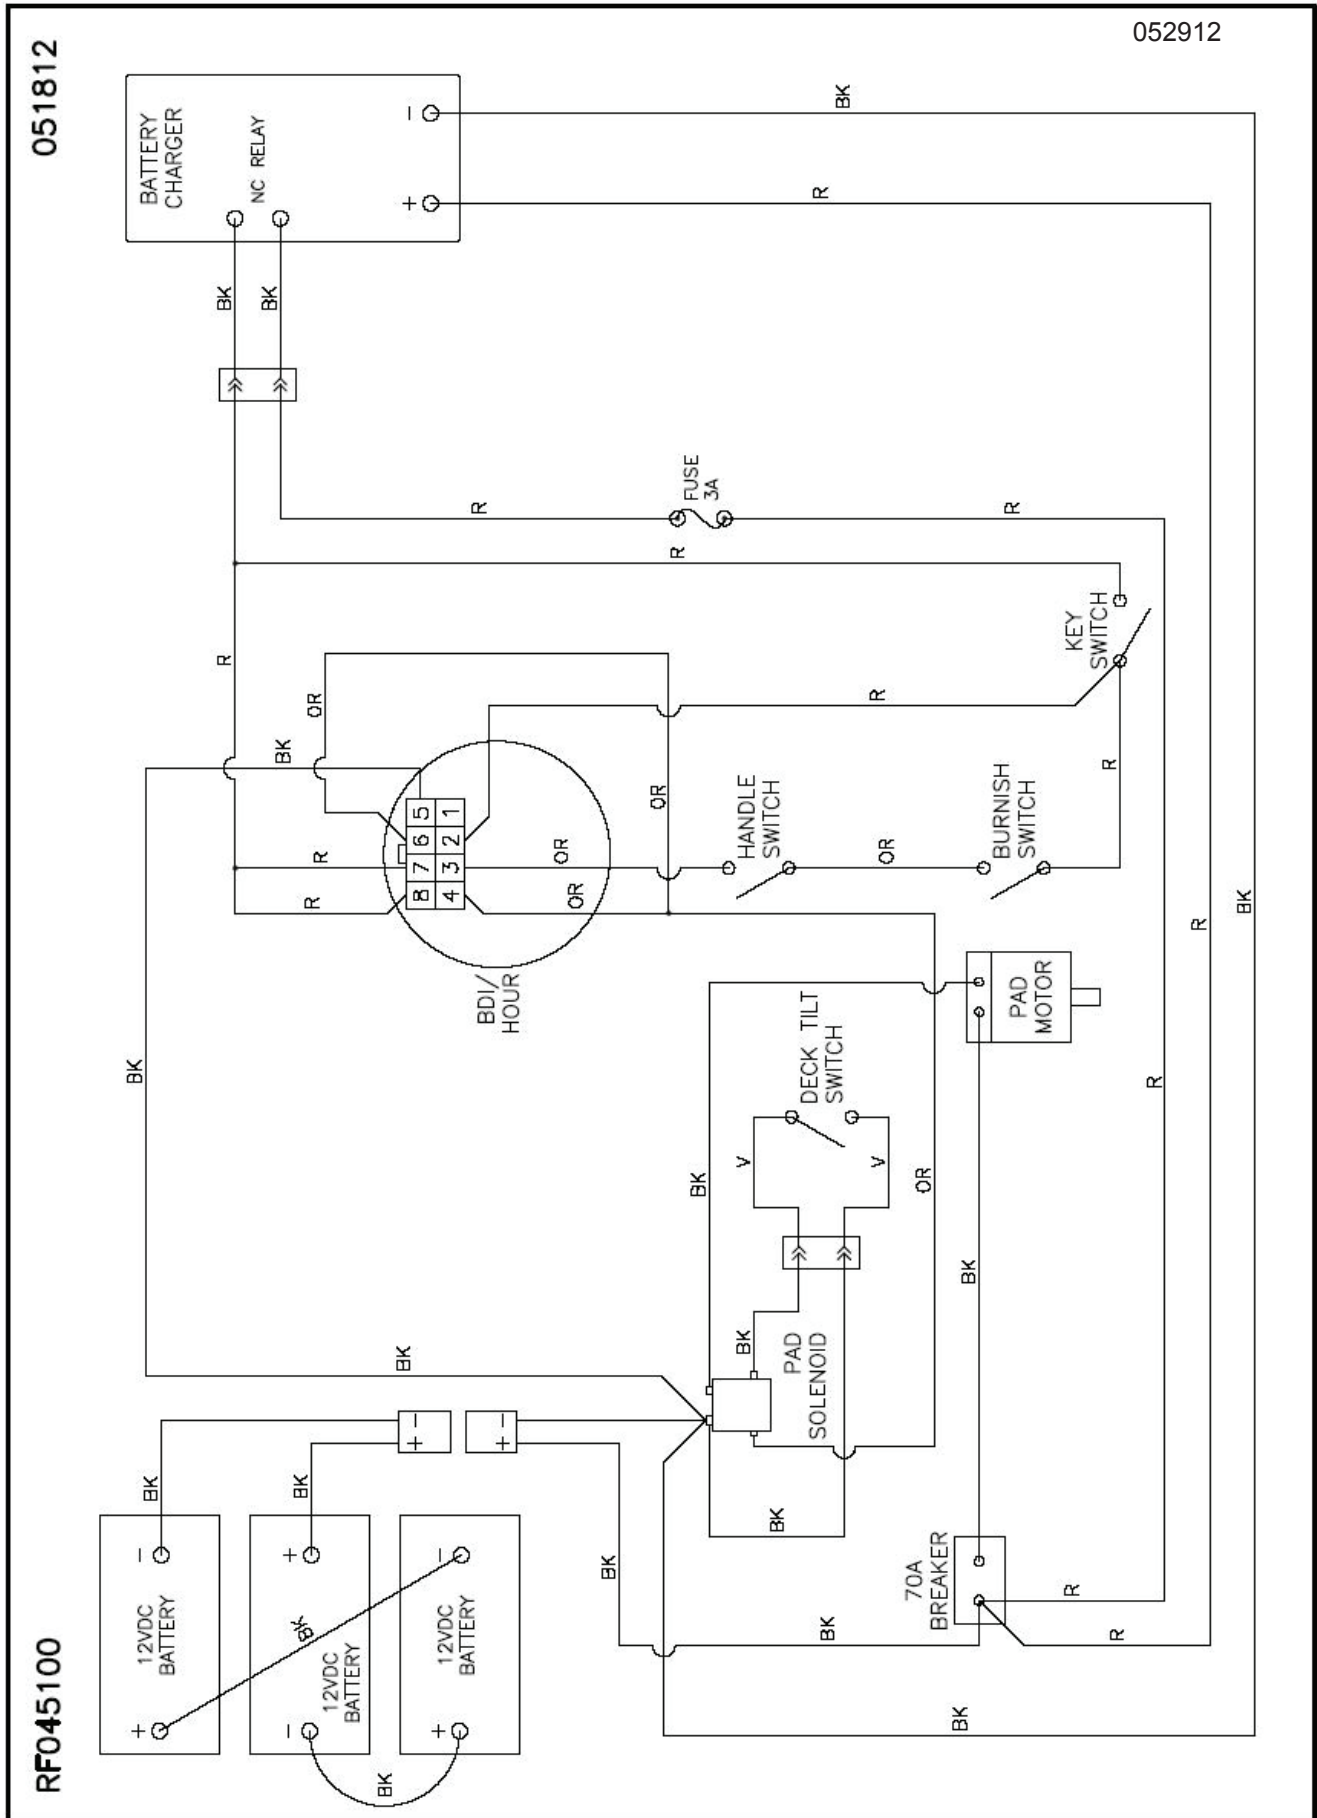


Electrical Schematic (Traction)

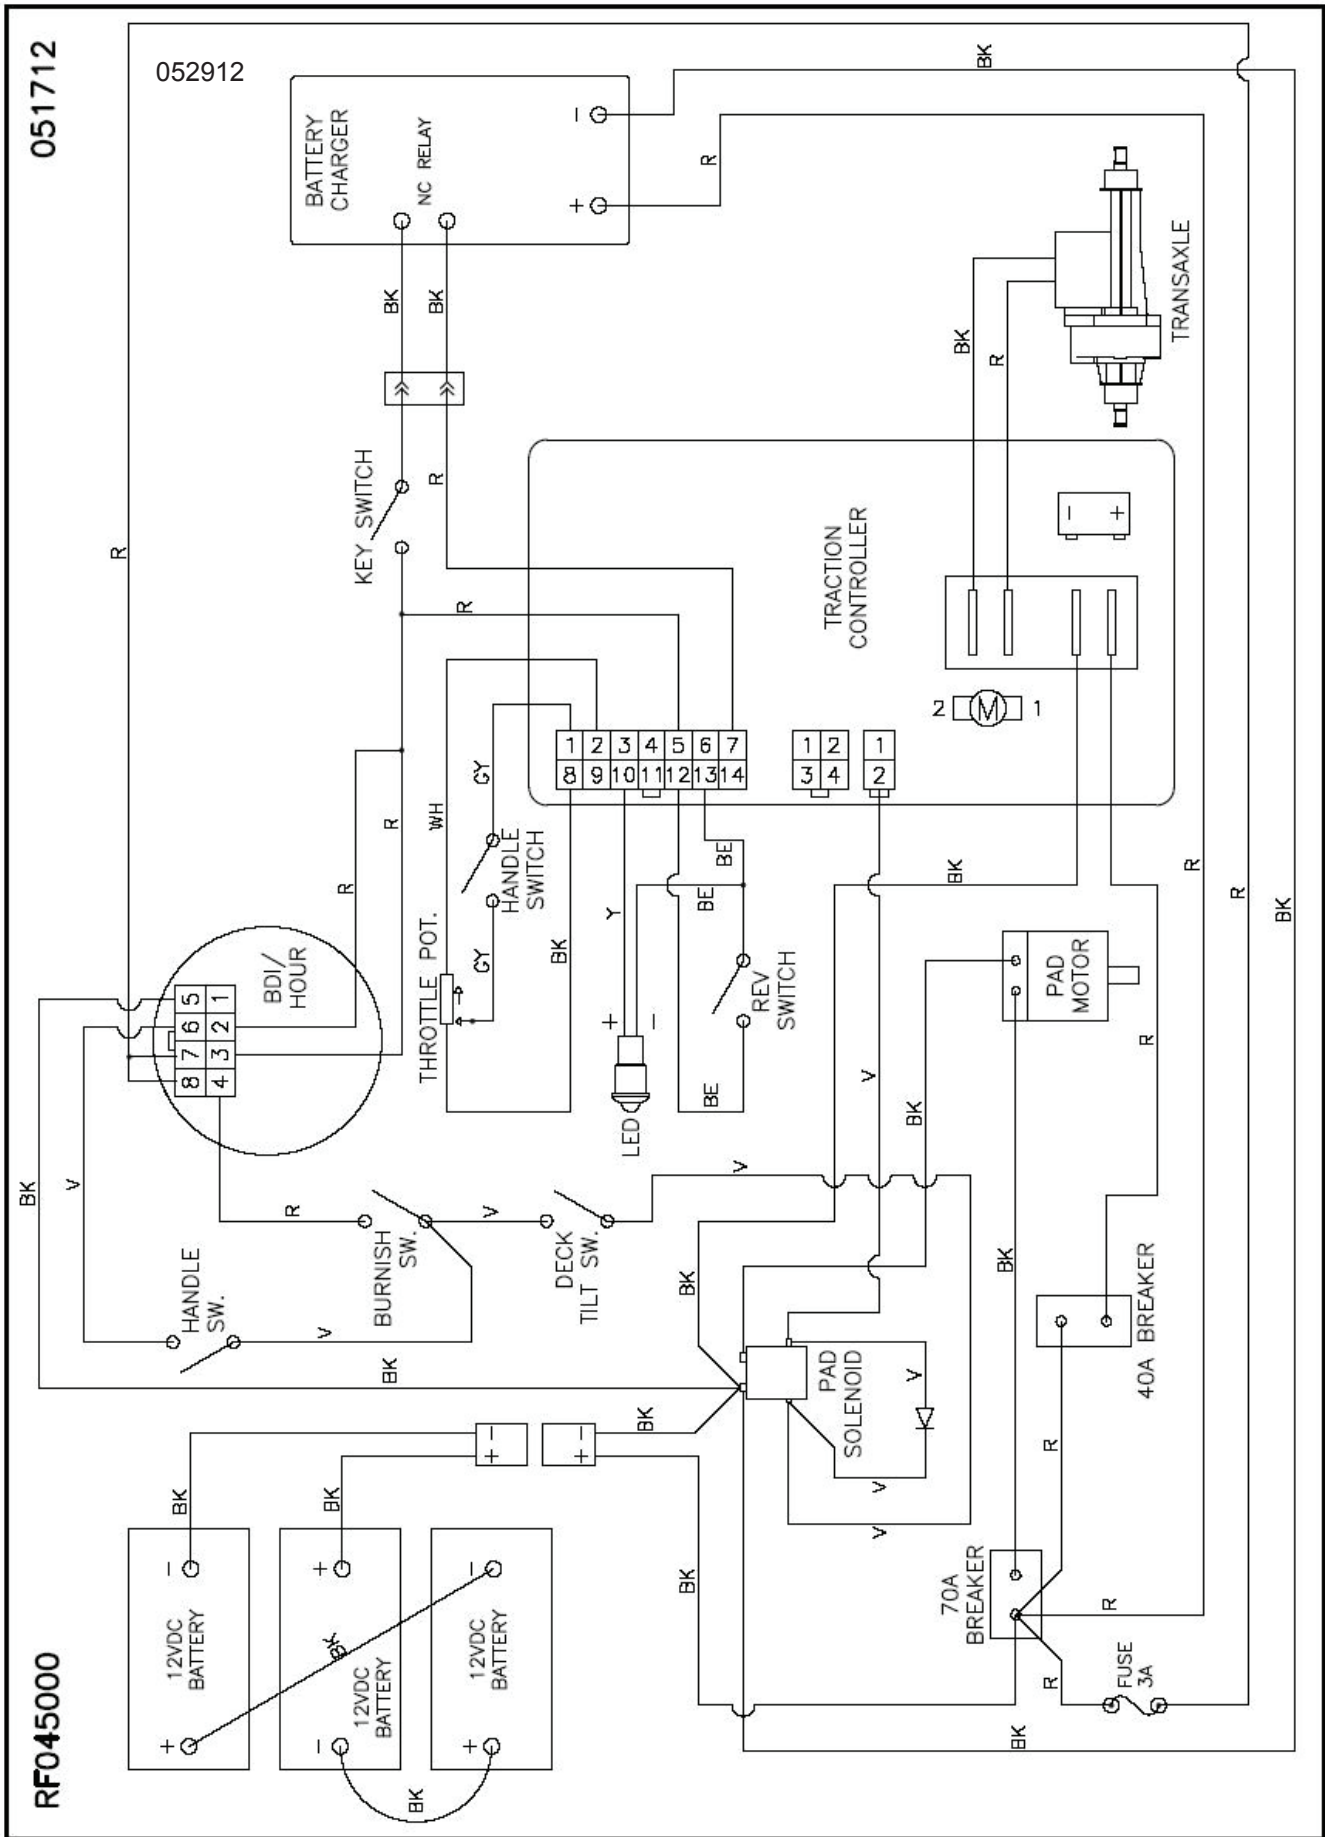

Connections (Non-Traction)

052912




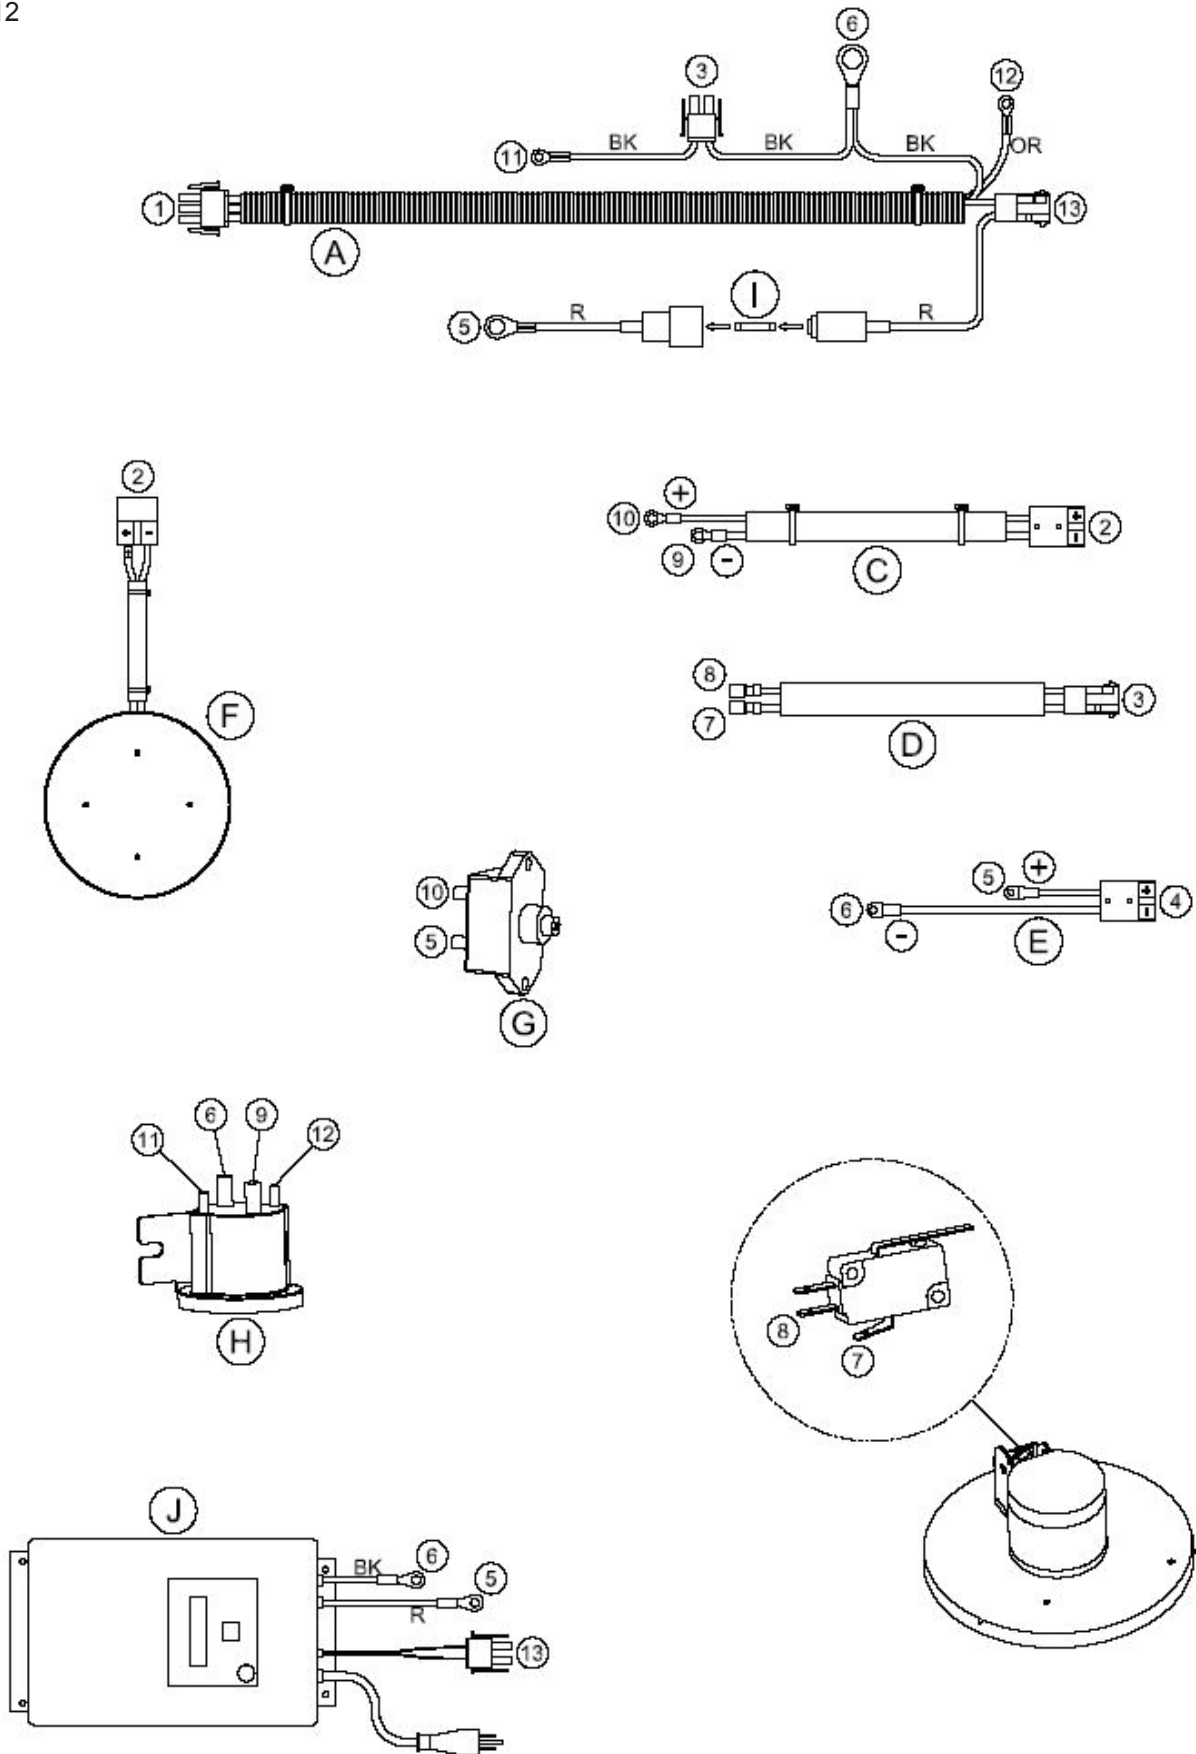


RF044700

051712

Connections (Non-Traction) Continued

052912

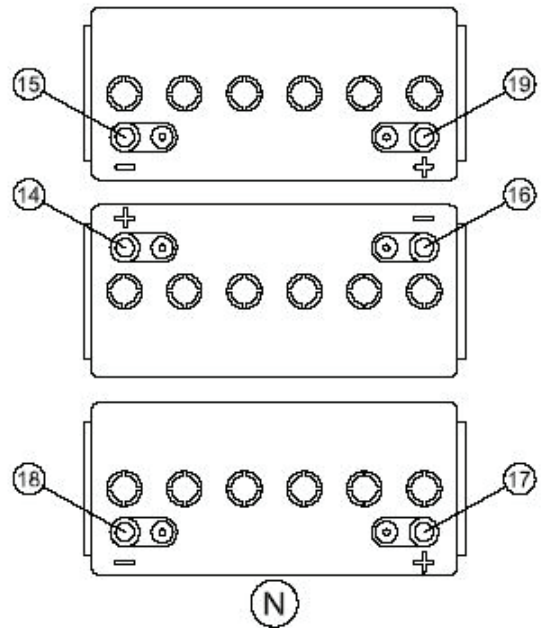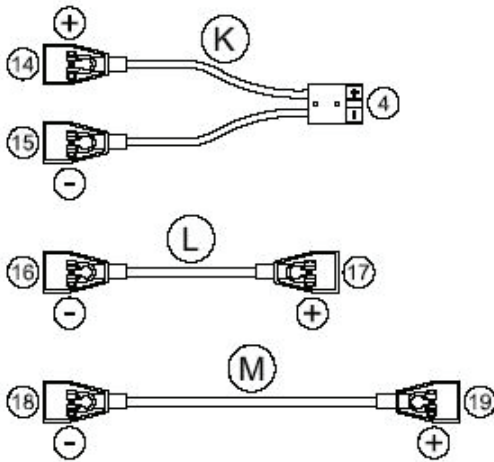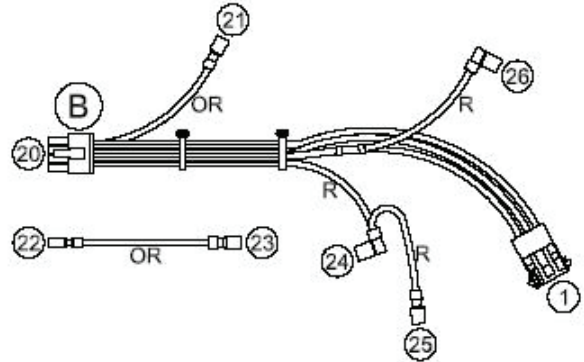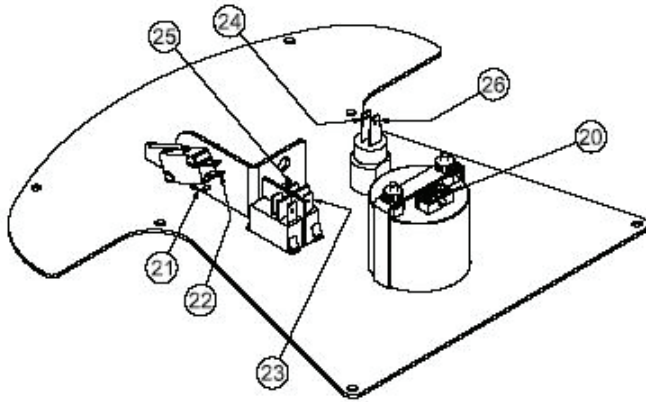

RF044700

051712

















Ref. Part #	Description	Qty.
A MP426500	HARNESS, MAIN, PAD ASST.	1
B MP426700	HARNESS, CONT. PAN., PAD ASST.	1
C MP426800	HARNESS, MOTOR, BURNISH	1
D MP427000	HARNESS, SWITCH, TILT, HEAD	1
E MP427200	CABLE, BATTERY, 2 AWG, ASM.	1
F MP424200	MOTOR, 2.5HP, 36VDC, ASM.	1
G MP414800	BREAKER, CIRCUIT, 70 AMP	1
H MP414700	CONTACTOR, 36VDC, 150A	1
I MP234700	FUSE, GLASS, 3 AMP	1
J1 SA027500	CHARGER, 110V, 36V, ASM.	1

Ref. Part #	Description	Qty.
J2 SA027600	CHARGER, 220V, 36V, ASM.	1
K MP279700	CABEL, BATT./ CONNECTOR	1
L MP238200	CABLE, BATTERY, 13.5"	1
M MP279800	CABLE, BATT./ CONNECTOR	1
N1 MP223500	BATTERY, 12V, LEAD ACID	3
N2 MP431600	BATTERY, 12V, SEALED	3

052912

Connections (Traction)

052912

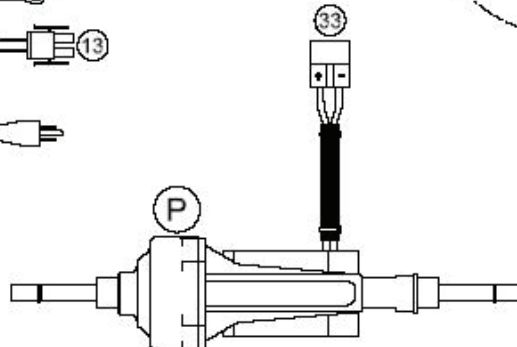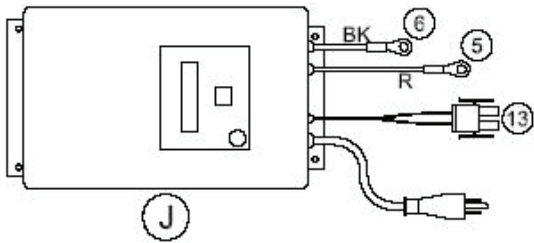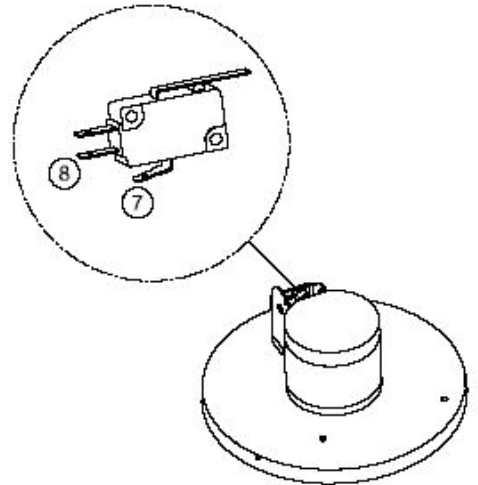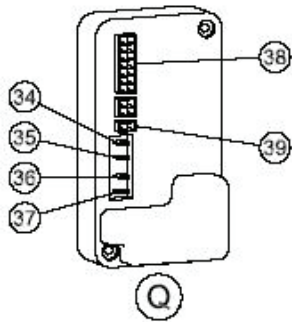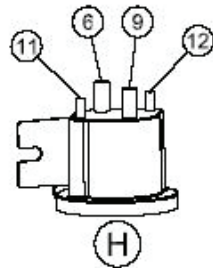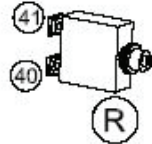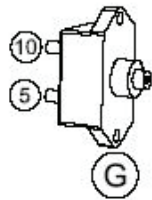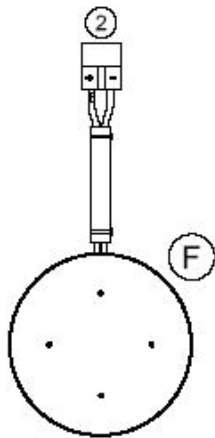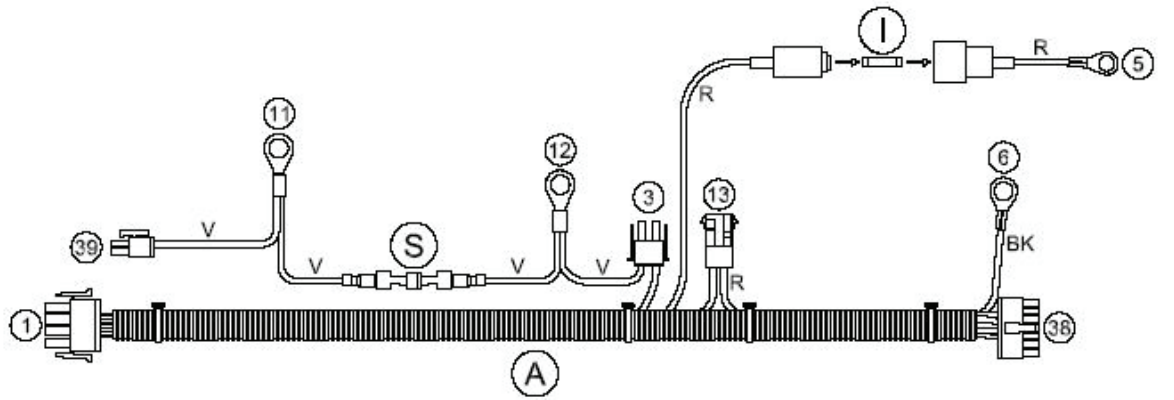


RF044000

051812

Connections (Traction) Continued

052912

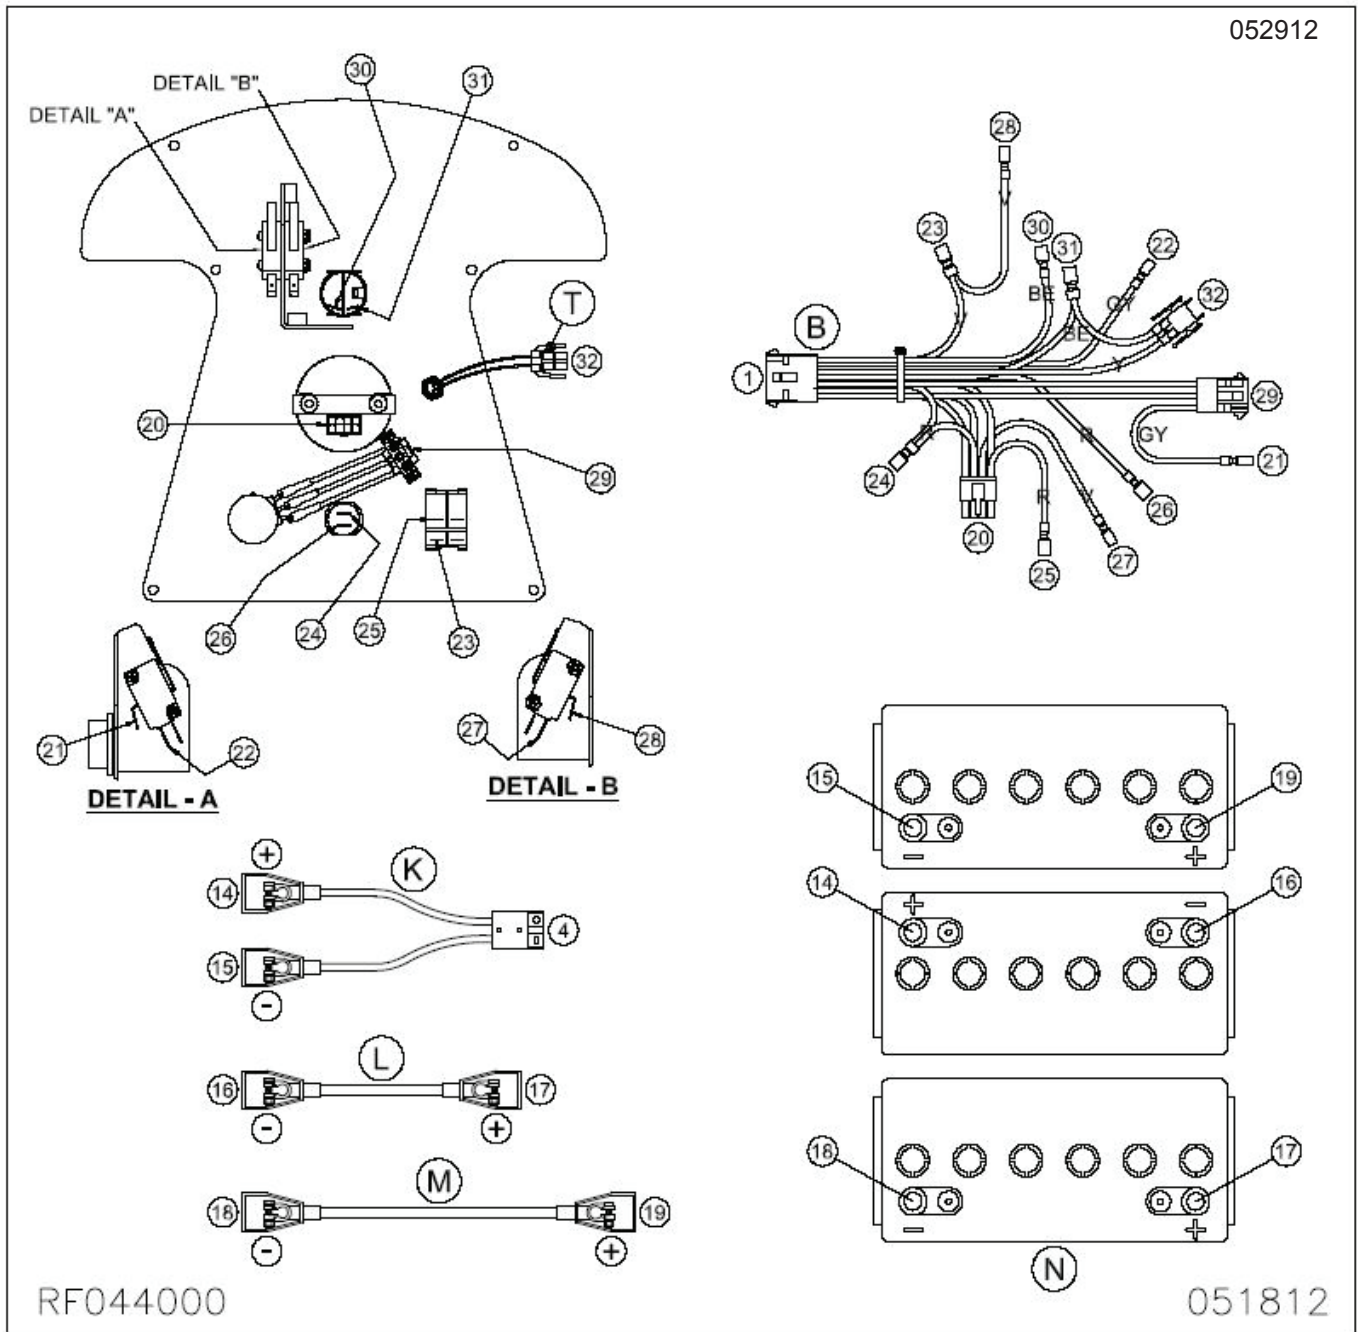





Ref. Part #	Description	Qty.
A MP432200	HARNESS, MAIN, TRACTION	1
B MP432100	HARNESS, CONT. PAN., TRAC.	1
C MP426800	HARNESS, MOTOR, BURNISH	1
D MP427000	HARNESS, SWITCH, TILT, HEAD	1
E MP427200	CABLE, BATTERY, 2 AWG, ASM.	1
F MP424200	MOTOR, 2.5HP, 36VDC, ASM.	1
G MP414800	BREAKER, CIRCUIT, 70 AMP	1
H MP414700	CONTACTOR, 36VDC, 150A	1
I MP234700	FUSE, GLASS, 3 AMP	1
J1 SA027500	CHARGER, 110V, 36V, ASM.	1
J2 SA027600	CHARGER, 220V, 36V, ASM.	1
K MP279700	CABEL, BATT./ CONNECTOR	1
L MP238200	CABLE, BATTERY, 13.5",	1
M MP279800	CABLE, BATT./ CONNECTOR	1

Ref. Part #	Description	Qty.
N1 MP223500	BATTERY, 12V, LEAD ACID	3
N2 MP431600	BATTERY, 12V, SEALED	3
O MP426900	HARNESS, WIRING, TRANSAXLE	1
P MP424500	TRANSAXLE, 36 VDC, ASM.	1
Q MP409401	CONTROLLER, TRACTION,	1
R MP414900	BREAKER, CIRCUIT, 40 AMP	1
S MP254600	DIODE, 400VDC, 6 AMP, ASM.	1
T SA028000	LED, RED, REPLACEMENT, KIT	1
U MP318400	SWITCH, MICRO, 12V, 15A, 1" LEVER	1
V MP427500	WIRE, 10 AWG, RED, 3"L	1
W MP427600	WIRE, 10 AWG, RED, 16"L	1
X MP427700	WIRE, 10 AWG, BLACK, 12"L	1

052912

Sub Assembly

052912

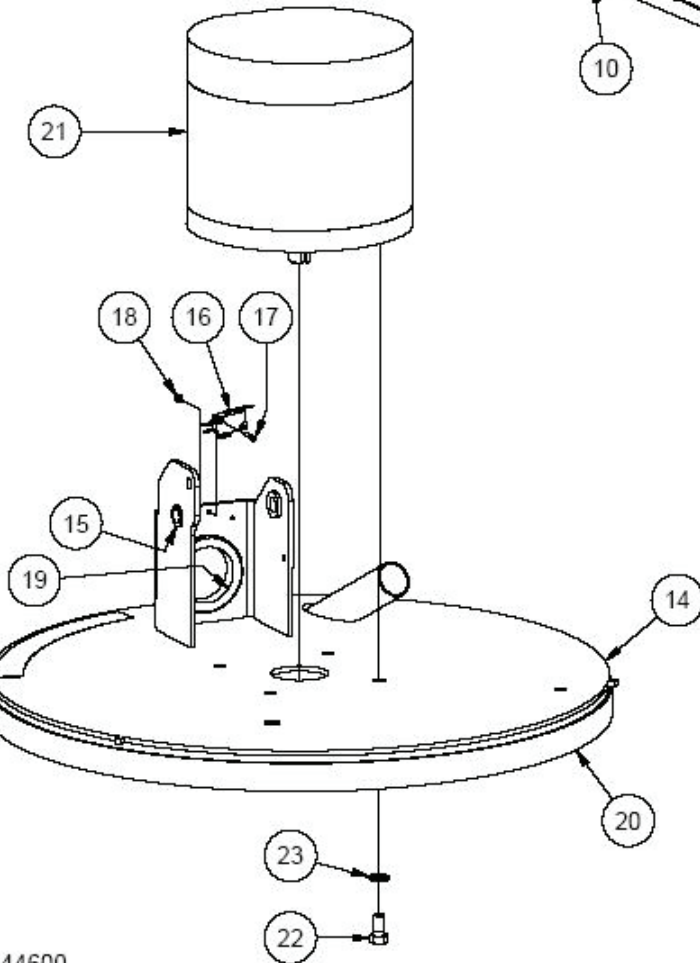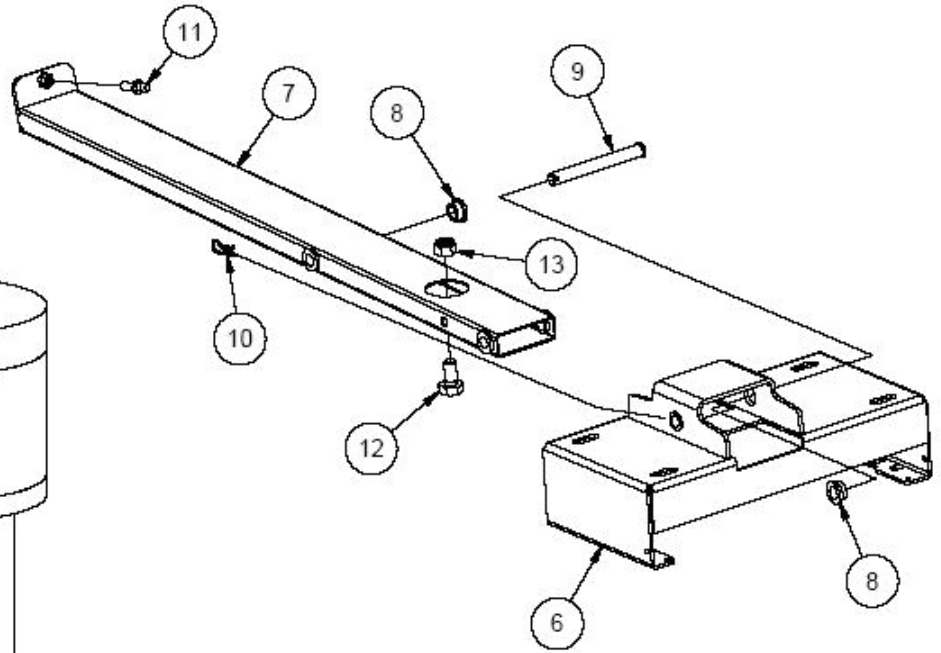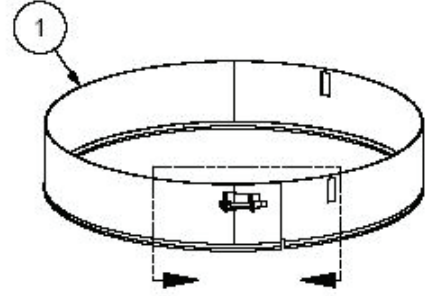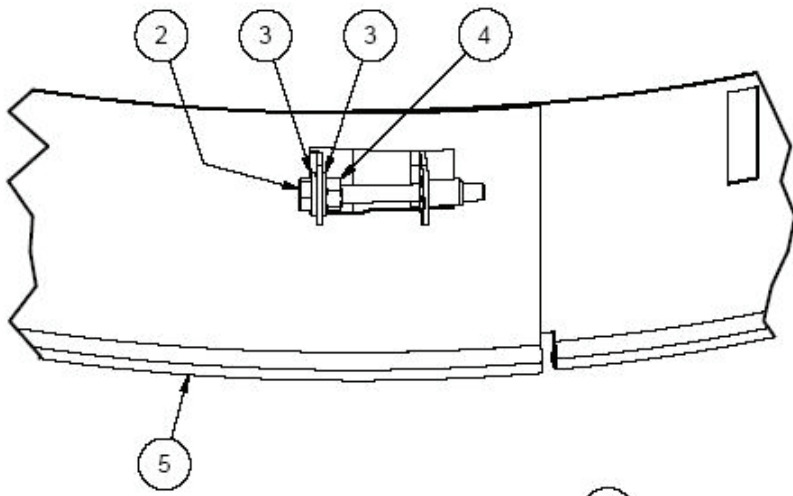

RF044600

050812

Sub Assembly Continued


Ref. Part #	Description	Qty.
1	MP425200 SKIRT, STEEL, 20", ASM.	1
2	NB050600 BOLT, HEX, TAP, 1/4-20 x 2-1/2"	1
3	NB3350 WASHER, FLAT, 1/4"	2
4	MX1045 NUT, HEX, 1/4-20	1
5	MP139800 EDGING, WEAR, SKIRT, STEEL	1

Ref. Part #	Description	Qty.
6	MP423700 BRACKET, MNT, AXLE/TRANSAXLE, WLDMT.	1
7	MP423800 TUBE, MOUNT, SHROUD, WLDMT.	1
8	MP237100 BUSHING, FLANGED, BRONZE, 1/2 I.D. X 3/8 L	6
9	NB039704 PIN, CLEVIS, 1/2" X 4-1/2"	1
10	NB025600 PIN, PRESTO, 3/32 X 1 5/8, SS	1
11	MP414300 BALL, STUD, LONG, 10MM	1
12	NB6863 BOLT, HEX, 1/2 X 1, NC	1
13	NB014600 NUT, LOCK, 1/2-13	1

Ref. Part #	Description	Qty.
14	MP432600 SHROUD, 20", W/INSERTS, ASM.	1
15	MP237100 BUSHING, FLANGED, BRONZE, 1/2 I.D. X 3/8L	2
16	MP318400 SWITCH, MICRO, 12V, 15A, 1" LEVER	1
17	NB9625 SCREW, 4-40 X 3/4"	2
18	NB007000 NUT, LOCK, NYLON, 4-40	2
19	NB043800 GROMMET, 2"ID X 3/16 GROOVE X 2 3/4" OD	1
20	MP415100 VELCRO, LOOP, 1" WIDE, BLACK	1
21	MP424200 MOTOR, 2.5HP, 36VDC, 2000RPM, ASM.	1
	MP433200 BRUSH, MOTOR, 2.5HP, 36V (KIT)	1
22	NB6851 SCREW, CAP, HH, 3/8-16 X 3/4	4
23	MX1075 WASHER, LOCK, 3/8"	4

Final Bottom Assembly (Non-Traction)

052912

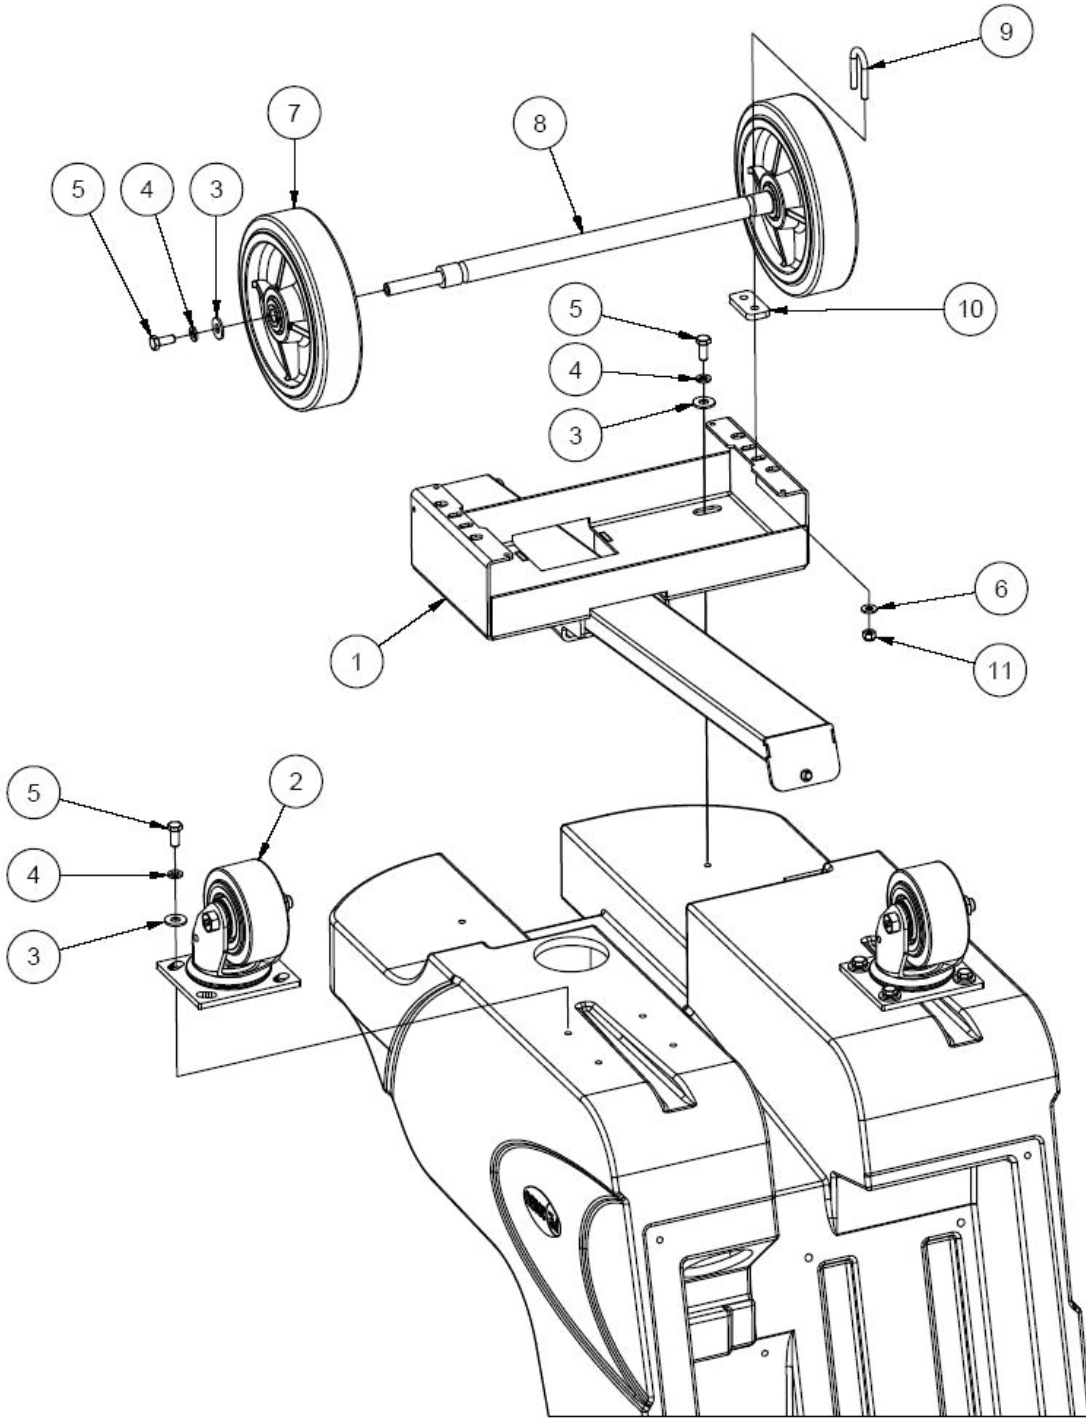

RF044500


050812

Final Bottom Assembly (Non-Traction) Continued

Ref. Part #	Description	Qty.
1 MP424400	BRACKET, MOUNT, AXLE/ TRANS AXLE	1
2 MP432500	CASTER, 4", SWIVEL, w/ BRAKE	2
3 NB9267	WASHER, FLAT, 5/16"	14
4 NB6111	WASHER, LOCK, 5/16"	14
5 NB9745	SCREW, CAP, 5/16"-18 X 3/4"	14
6 NB3350	WASHER, FLAT, 1/4"	4
7 MP409900	WHEEL, 8" X 2", W/SEALED BALL BEARING	2
8 MP423500	AXLE, 19"L, 1/ 1/2" DIA. ENDS	1
9 NB061600	BOLT, U, 1/4-20 X 5/8, 1 3/4 LEG	2
10 MP425301	SPACER, AXLE, 2" X 1" X 1/4"	2
11 NB3275	NUT, LOCK, 1/4"	4

Final Bottom Assembly (Traction)

052912

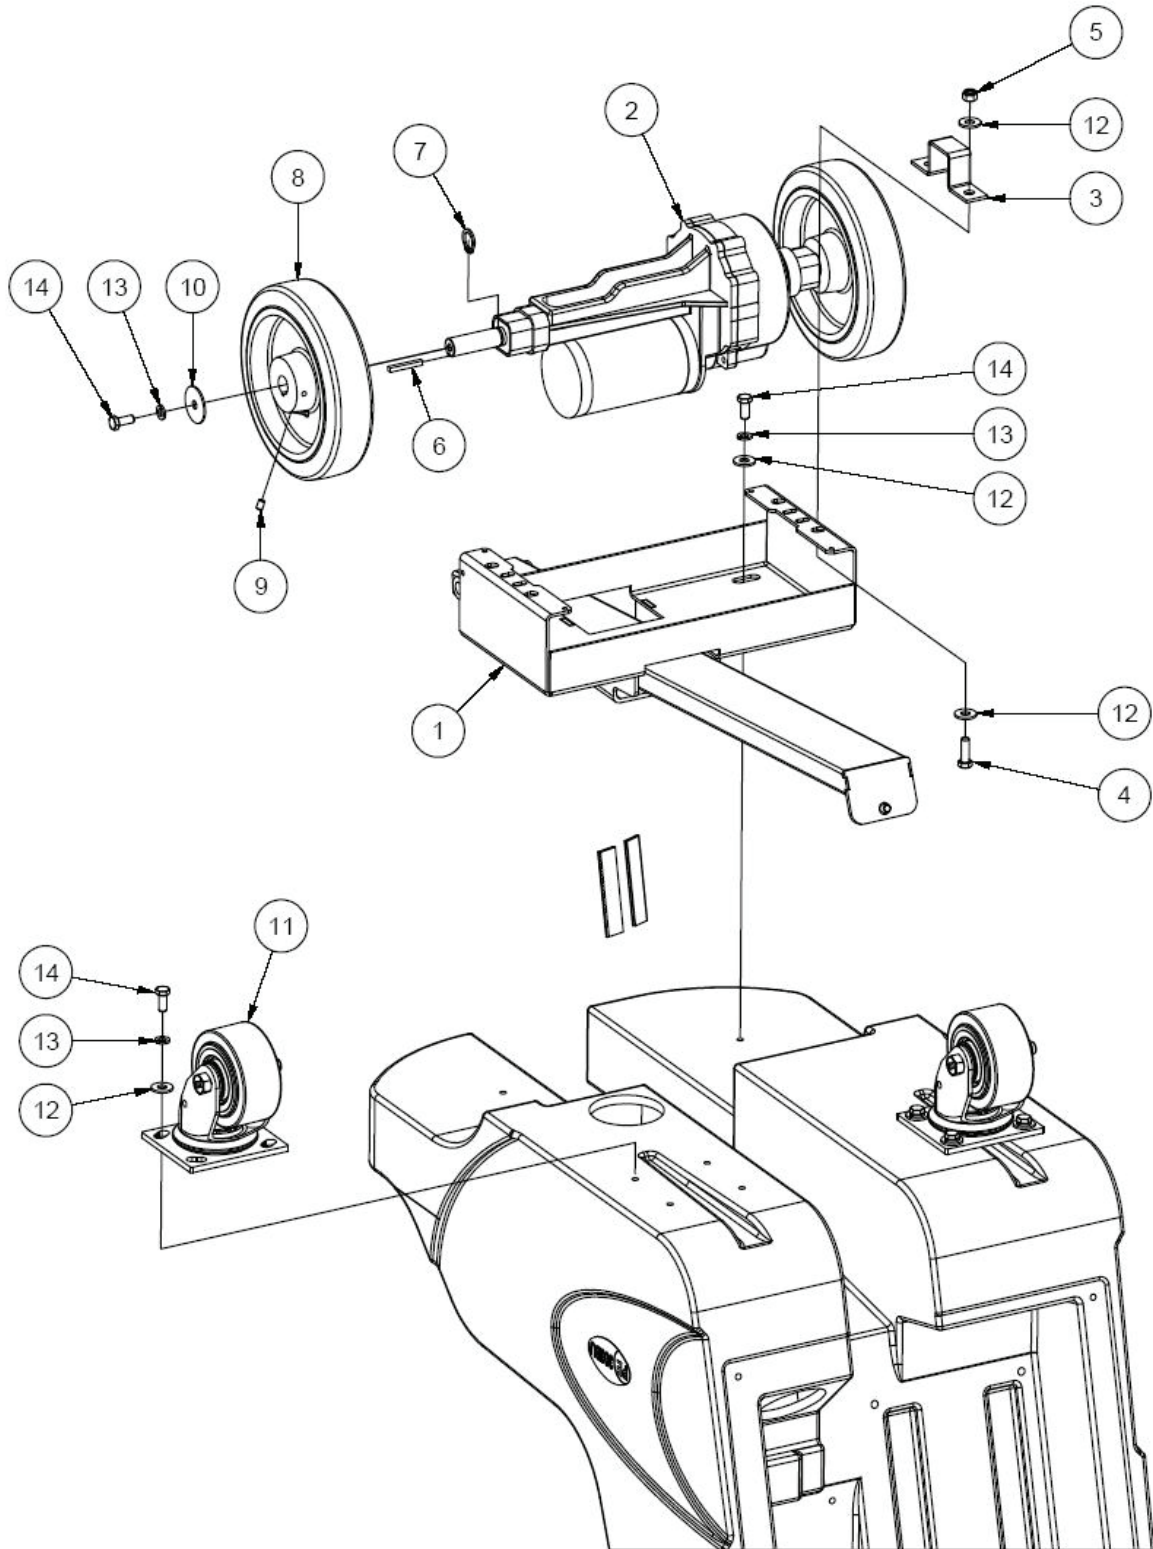

RF044400




050812

Final Bottom Assembly (Traction) Continued

Ref. Part #	Description	Qty.
1 MP424400	BRACKET, MOUNT, AXLE/ TRANSAXLE	1
2 MP424500	TRANSAXLE, 36 VDC, 3/4" SHAFT, ASM.	1
MP433300	BRUSH, MOTOR, TRANSAXLE, 36V (KIT)	1
3 PG001801	BRACKET, TRANSAXLE, PAINTED	2
4 NB6545	SCREW, CAP, HH, 5/16"-18 X 1"	4
5 NB3265	NUT, LOCK, 5/16"-18, NC	4
6 BA003300	KEY, 3/16 X 1.50	2
7 NB018500	RING, RETAINER, 3/4", C-STYLE, HD	2
8 MP409800	WHEEL, 8" X 2", DRIVE, 3/4" BORE, GREY	2
9 NB9302	SCREW, SET, 1/4-20 X 3/8	4
10 NB9505	WASHER, FLAT, 5/16" X 1 1/2"	2
11 MP432500	CASTER, 4", SWIVEL, w/ BRAKE	2
12 NB9267	WASHER, FLAT, 5/16"	20
13 NB6111	WASHER, LOCK, 5/16"	14
14 NB9745	SCREW, CAP, 5/16"-18 X 3/4"	14

Final Rear Assembly

052912

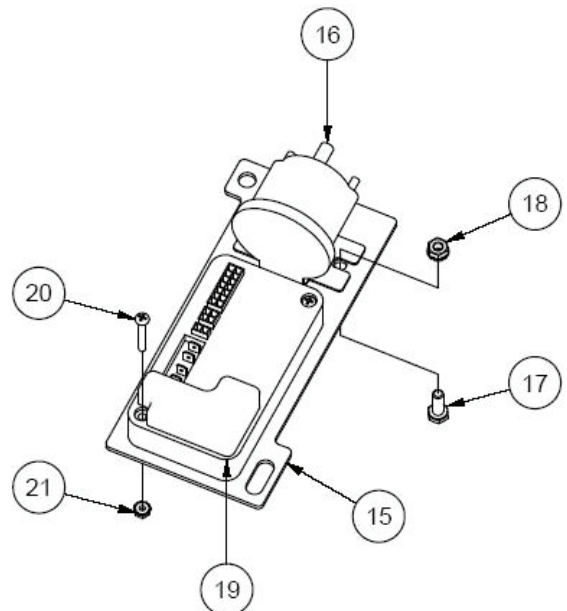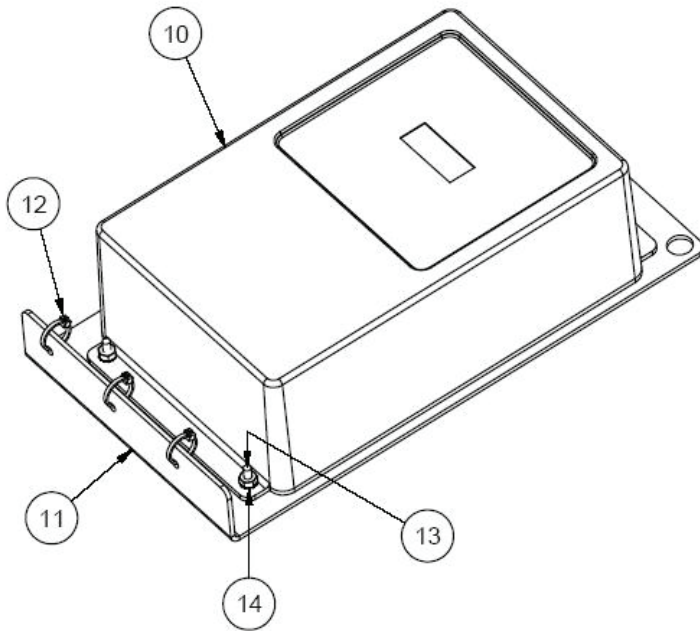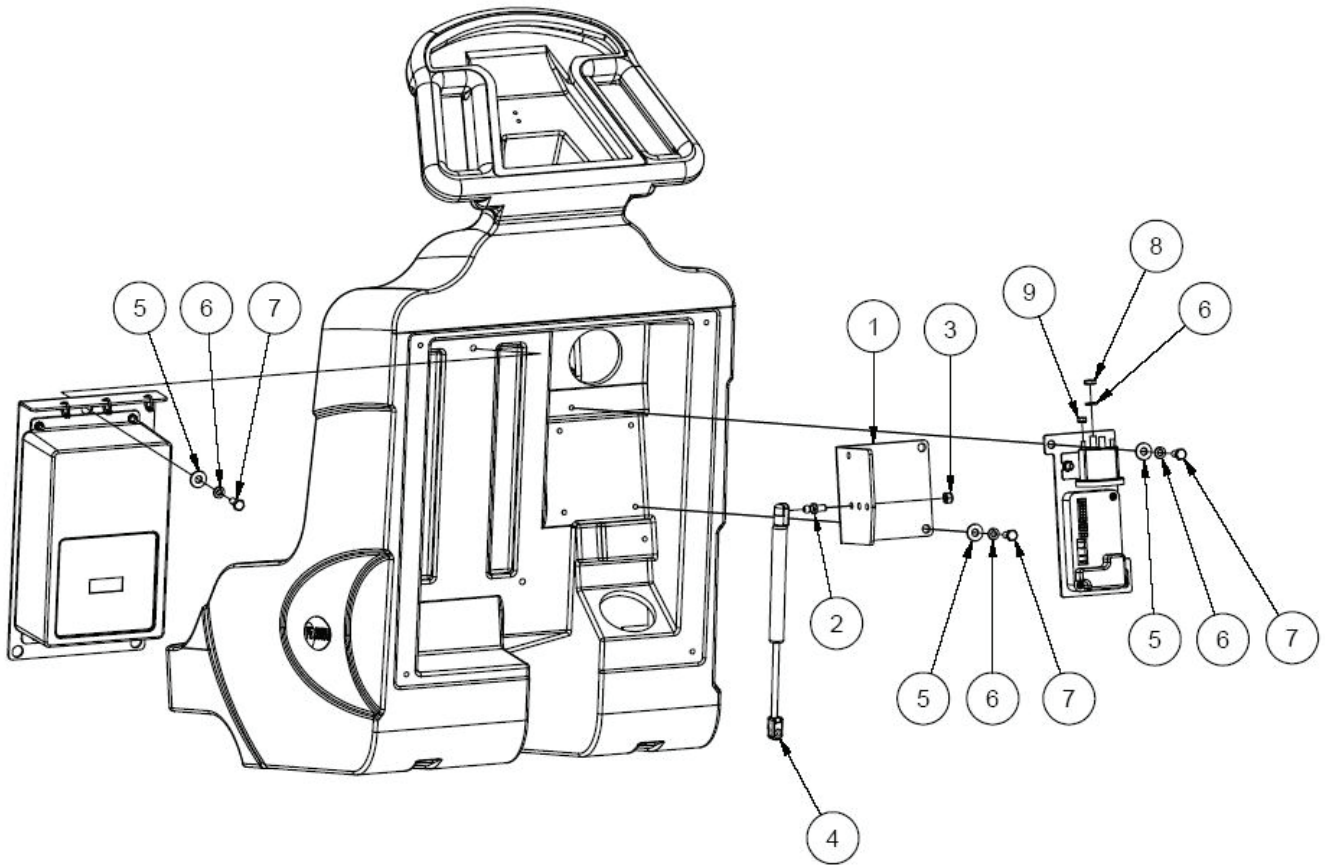

RF044100

050812

Final Rear Assembly Continued






Ref. Part #	Description	Qty.	
1	MP422901	PLATE, MOUNT, SHOCK	1
2	MP206000	BALL, STUD, 10MM	1
3	NB3265	NUT, LOCK, 5/16"-18, NC	1
4	MP415200	SPRING, GAS, 80MM STROKE, 445N	1
5	NB9267	WASHER, FLAT, 5/16"	9
6	NB6111	WASHER, LOCK, 5/16"	11
7	NB9745	SCREW, CAP, 5/16"-18 X 3/4"	9
8	NB005700	NUT, 5/16-24, JAM	2
9	NB006600	NUT, KEPS, 10-32	2

Ref. Part #	Description	Qty.	
10A	SA027500	CHARGER, 110V IN, 36V OUT, ASM.	1
10B	SA027600	CHARGER, 220V IN, 36V OUT, ASM.	1
11	MP423101	PLATE, MOUNT, CHARGER	1
12	NB6035	TIE, NYLON, 1/8 X 4, BLK	3
13	NB040400	SCREW, PAN HEAD, #10-32 UNF, X 3/4	4
14	NB006600	NUT, KEPS, 10-32	4

Ref. Part #	Description	Qty.	
15	MP423001	PLATE, MOUNT, CONTACTOR	1
16	MP414700	CONTACTOR, 36VDC, 150A	1
17	NB6535	SCREW, CAP, HH, 1/4-20 X 3/4	2
18	NB9845	NUT, KEPS, 1/4-20	2
19	MP409401	CONTROLLER, TRAC., 36V	1
20	MX1011	SCREW, MACH, 8-32 X 1 1/4 (TRAC. ONLY)	2
21	NB9710	NUT, KEPS, 8-32, ZINC (TRAC. ONLY)	2

Final Top Assembly

052912

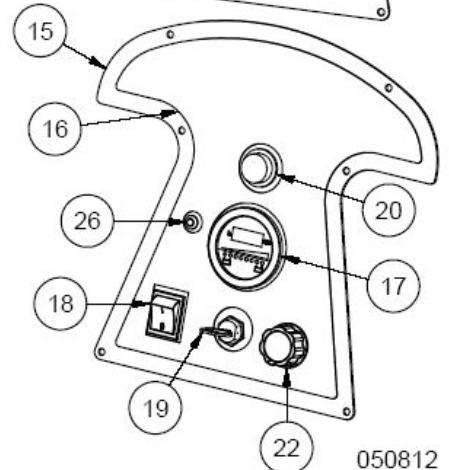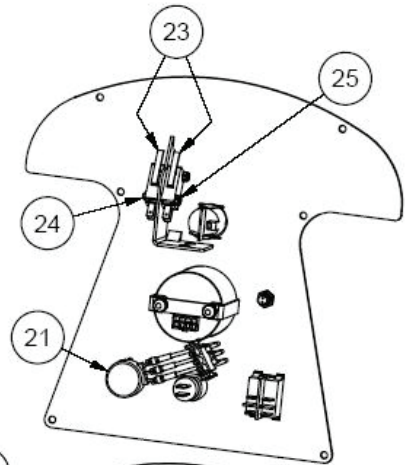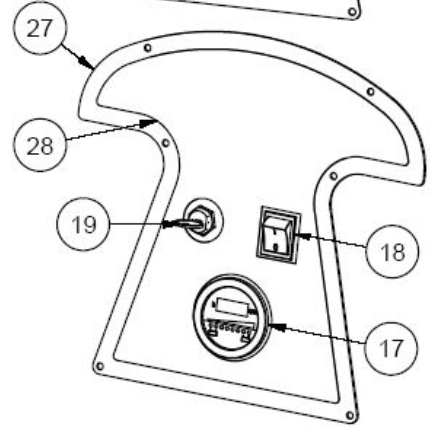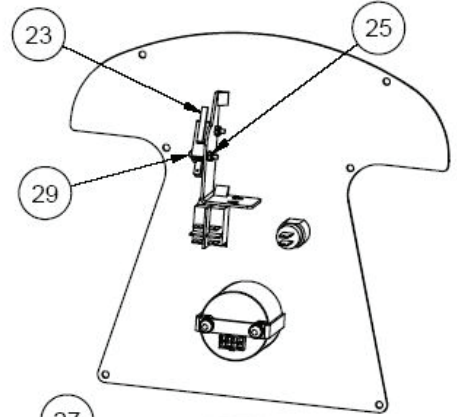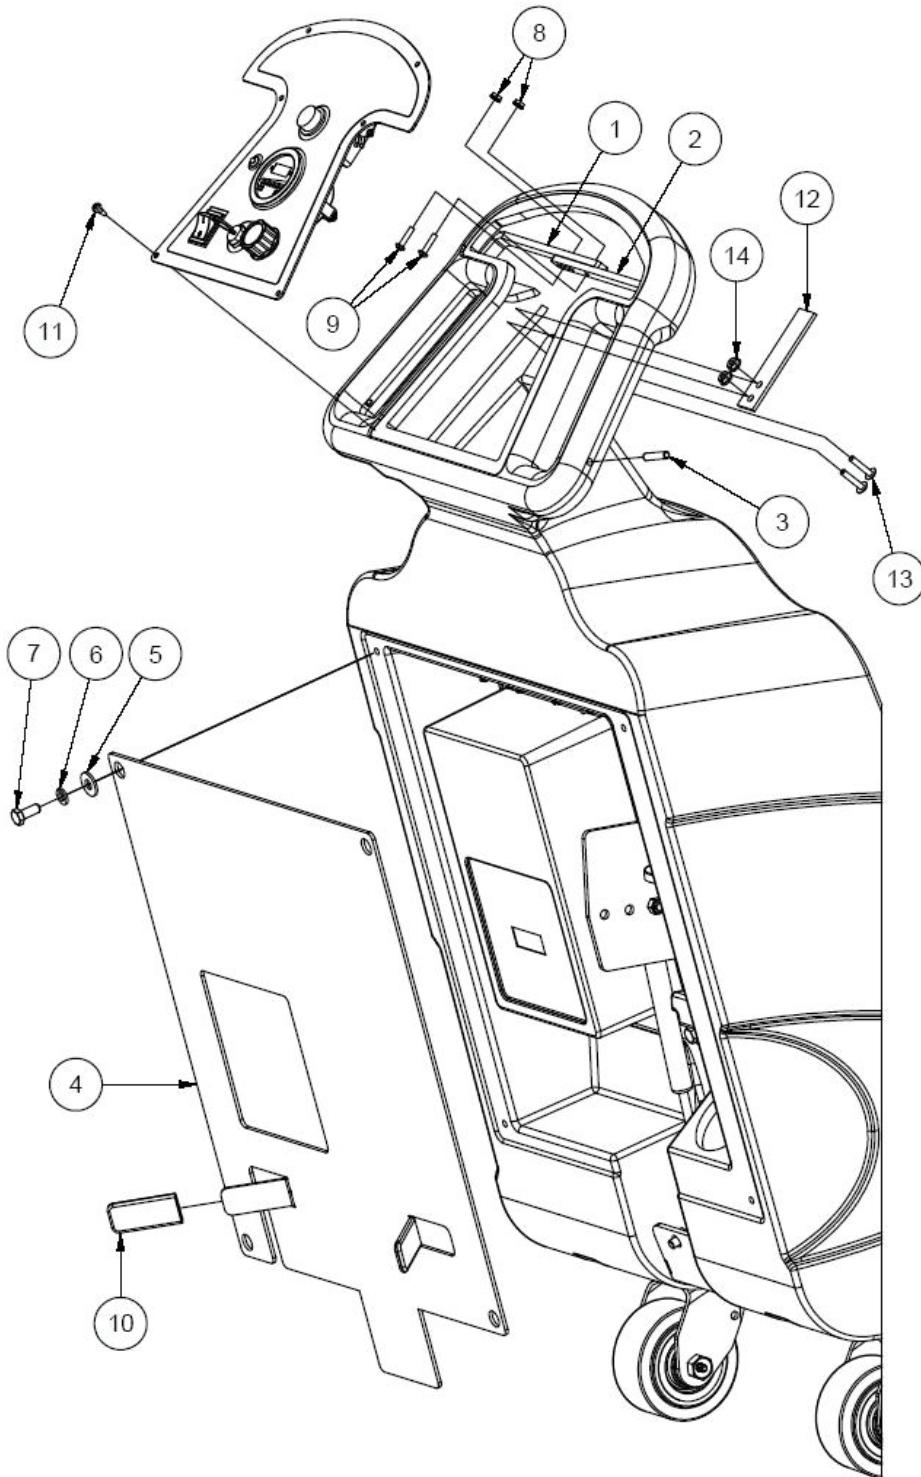

RF044300

050812

Final Top Assembly Continued


Ref. Part #	Description	Qty.
1	MP423201 LEVER, HANDLE, LEFT	1
2	MP423202 LEVER, HANDLE, RIGHT	1
3	MP6390 PIN, ROLL, 1/4 X 1 1/8	2
4	MP431401 PLATE, COVER, REAR, W/ SLOT	1
5	NB9267 WASHER, FLAT, 5/16"	35
6	NB61111 WASHER, LOCK, 5/16"	33
7	NB9745 SCREW, CAP, 5/16"-18 X 3/4"	30
8	NB9710 NUT, KEPS, 8-32, ZINC	2
9	NB041200 SCREW, PAN HEAD, #8 X 3/4"	2
10	MP077400 COVER, TENSION, SPRING	2
11	NB043600 SCREW, PH, HI-LO, #8 x 3/8"	6
12	MP432900 SPRING, HANDLE LEVER, 1/8"X1"X 4"	1
13	NB5350 SCREW, MACHINE, TH, 10-24 X 1"	2
14	NB9510 NUT, SPIN LOCK, 10-24	2

Ref. Part #	Description	Qty.
15	MP431600 PANEL, CONTROL, TRACTION, W/LDMNT	1
16	MP426200 DECAL, CONTROL PANEL, TRACTION	1
17	MP414501 METER, HOUR/ BATTERY IND.,	1
18	MP414600 SWITCH, ROCKER, DPST	1
19A	MP411300 SWITCH, KEY, 36V	1
19B	KC4834001 REPLACEMENT KEY (NOT SHOWN)	1
20	MP415000 SWITCH, PUSH, 250V(TRAC. ONLY)	1
21	PG016400 POTENTIOMETER, ASM. (TRAC. ONLY)	1
22	MP418000 KNOB, PHENOLIC, (TRAC. ONLY)	1
23	MP318400 SWITCH, MICRO, 12V, 15A, 1" LEVER	1
24	NB051000 SCREW, MACH., PAN HD., 4-40 X 1	2
25	NB007000 NUT, LOCK, NYLON, 4-40	4
26	SA028000 LED, RED, 36V REPLACEMENT KIT	1

Ref. Part #	Description	Qty.
27	MP424100 PANEL, CONTROL, PAD ASSIST	1
28	MP426300 DECAL, CONTROL PANEL, 300BU	1
29	NB9625 SCREW, 4-40 X 3/4"	2

Final Front Assembly

052912

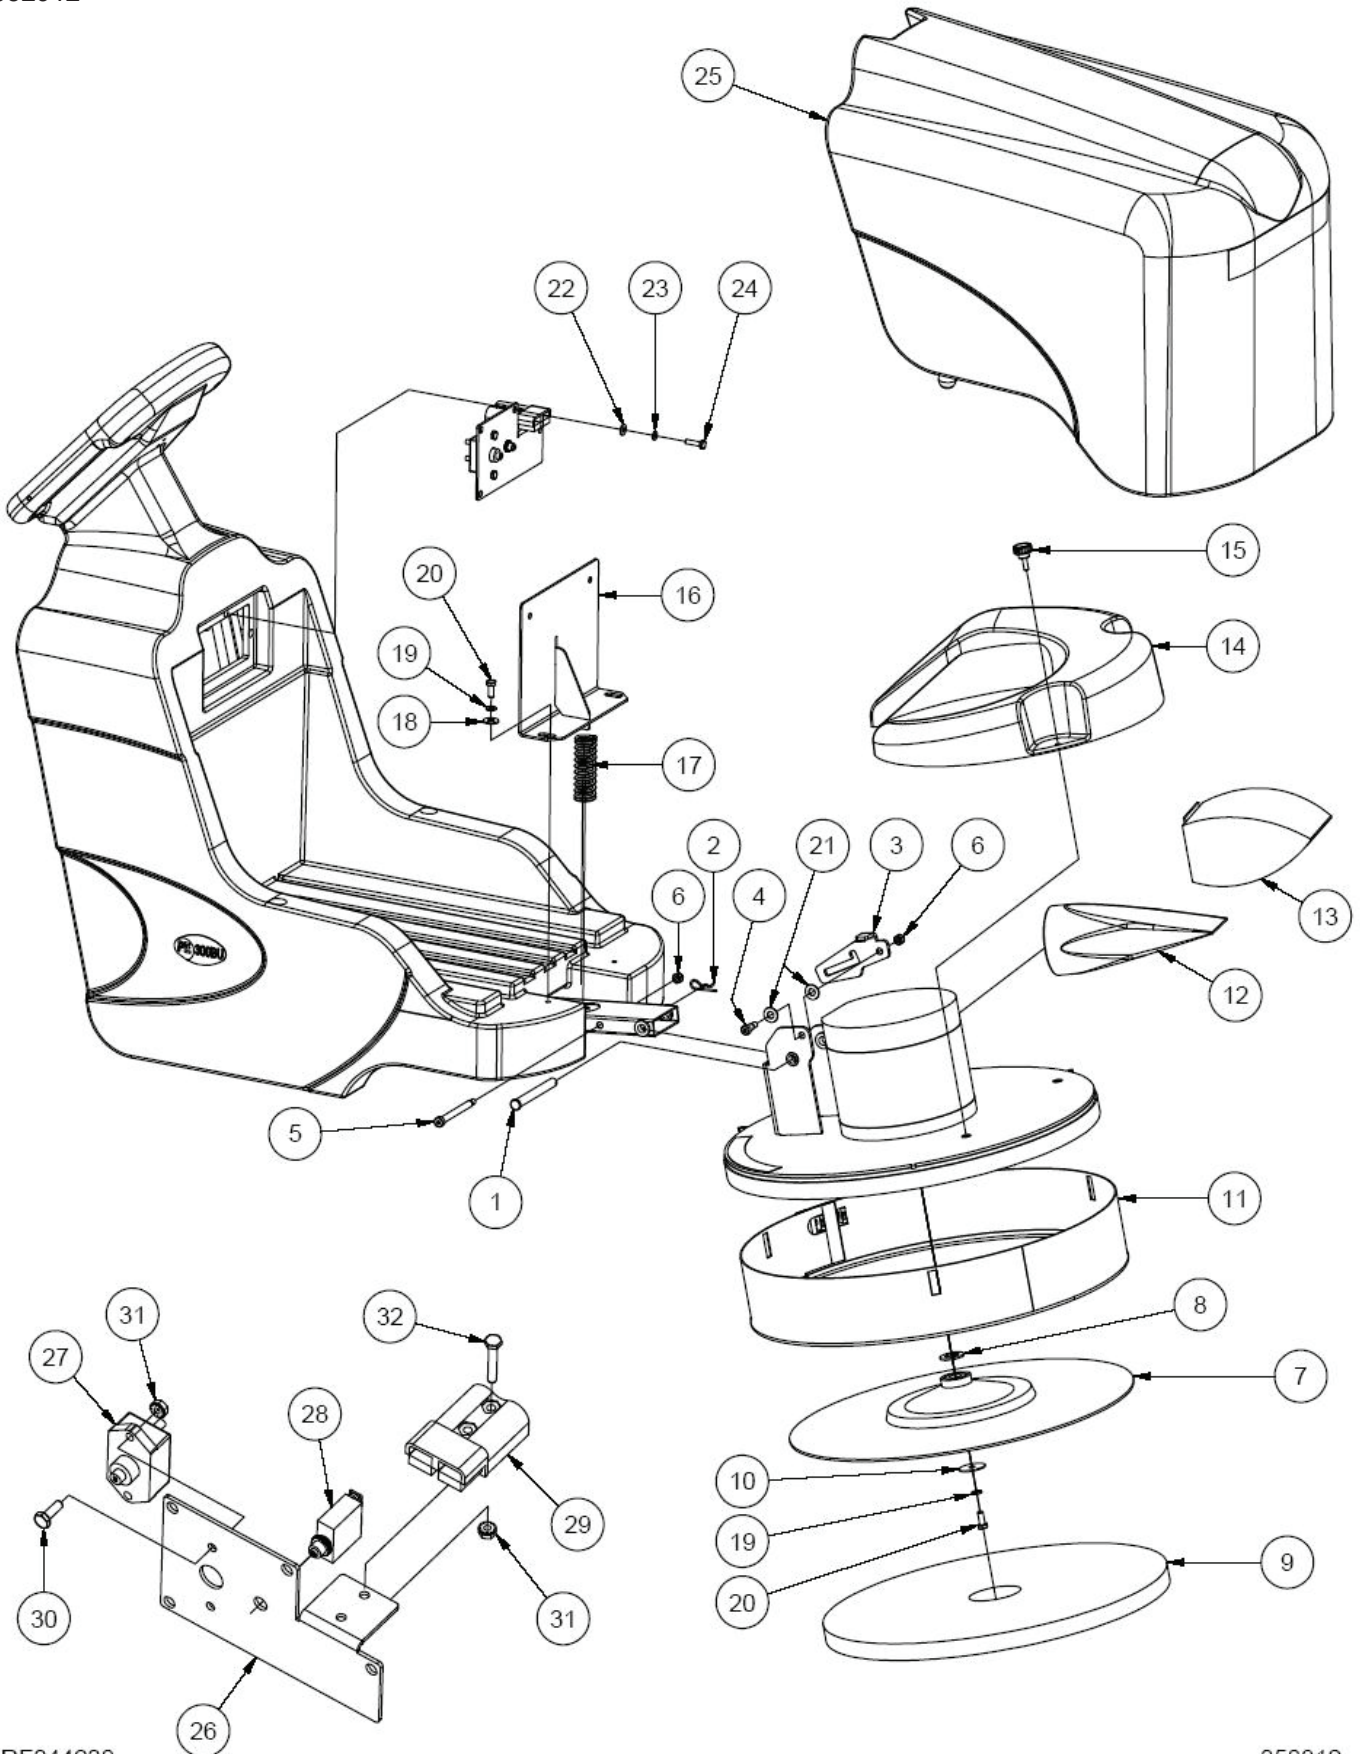

RF044200

050812

Final Front Assembly Continued

Ref. Part #	Description	Qty.
1	NB039704 PIN, CLEVIS, 1/2" X 4-1/2"	1
2	NB025600 PIN, PRESTO, 3/32 X 1 5/8, SS	1
3	MP423301 LATCH, TILT, SHROUD	1
4	NB026200 SCREW, SHOULDER, 3/8" X 1/2" X 5/16"-18	1
5	NB038600 SCREW, SHOULDER, 3/8 X 3-1/2 X 5/16-18	1
6	NB3265 NUT, LOCK, 5/16"-18, NC	2
7A	MP414000 PADHOLDER, 20", W/ PAD RETAINER	1
7B	MP432400 RETAINER, PAD (NOT SHOWN)	1
8	NB023400 WASHER, FLAT, NARROW, 3/4"	1
9	SEE ROUTINE MAINTENANCE PARTS LIST	
10	NB9505 WASHER, FLAT, 5/16" X 1 1/2"	1
11	MP425200 SKIRT, STEEL, 20", ASM.	1
12	MP414100 BAG, DUST, CLOTH, 10"L W/ RUBBER TOP	1
13	MP414200 BAG, DUST, PAPER, 5W X 3.5H X 7L, 3	1
14	MP431300 COVER, DUST BAG	1
15	MP155600 KNOB, FLUTED, 1/4-20 UNC X 3/4" STUD	2
16	MP423900 RETAINER, BATTERY, WELDMENT	1
17	MP415300 SPRING, COMP., .901".I.D. X 3.75"L	1
18	NB9267 WASHER, FLAT, 5/16"	2
19	NB6111 WASHER, LOCK, 5/16"	3
20	NB9745 SCREW, CAP, 5/16"-18 X 3/4"	3
21	NB025200 WASHER, FLAT, 3/8", SS	2
22	NB3350 WASHER, FLAT, 1/4"	4
23	NB6110 WASHER, LOCK, 1/4"	4
24	NB6530 SCREW, CAP, HH, 1/4-20 X 1	4
25	MP432700 COVER, BATTERY, w/ DECAL	1

Ref. Part #	Description	Qty.
26	MP422801 PLATE, MOUNT, PLUG, BATTERY	1
27	MP414800 BREAKER, CIRCUIT, 70 AMP	1
28	MP414900 BREAKER, CIRCUIT, 40 AMP (TRAC. ONLY)	1
29	MP427200 CABLE, BATT, 2 AWG, ASM.	1
30	NB6535 SCREW, CAP, HH, 1/4-20 X 3/4	2
31	NB9845 NUT, KEPS, 1/4-20	4
32	NB9000 SCREW, CAP, 1/4"-20 X 1 1/2", GD5	2

Limited Warranty

PE300BU

To Qualify for this warranty:

- 1) Machine must be registered at the time of purchase on a form provided by Amano Pioneer Eclipse® Corporation. Your Amano Pioneer Eclipse Distributor is responsible for the registration of your machine. Please cooperate with your Distributor in supplying necessary information on the card.
- 2) The machine must have been purchased from Amano Pioneer Eclipse or an authorized Amano Pioneer Eclipse Distributor.
- 3) This warranty extends to the original purchaser only and is not transferable to subsequent owners.

TIME PERIODS

- 1) Rotational molded parts are warranted for eight (8) years.
- 2) Batteries warranted by battery manufacturer for one (1) year.
- 3) **THREE (3) YEAR WARRANTY** - For parts on the model PE300BU. Warranted to be free from defects in material and workmanship for a period of three (3) years from the date of purchase by the original owners. (See Exclusions.)
- 4) **ONE (1) YEAR WARRANTY** - For labor necessary to make warranty repairs.

EXCLUSIONS (Not Covered by Warranty)

- 1) Parts that fail through normal wear by reason of their characteristics (cords, pads, skirts, wheels, or other consumable parts).
- 2) This warranty does not extend to parts affected by misuse, neglect, abuse or improper maintenance. All defective parts must be returned to the Distributor for credit.

THE OBLIGATION OF AMANO PIONEER ECLIPSE CORPORATION

- 1) The obligation of Amano Pioneer Eclipse under this warranty is limited to repairing or replacing, at its option, any part which is proven to be defective in material or workmanship under normal use for the applicable period stated above.
- 2) Warranty repairs will be made by your Amano Pioneer Eclipse Distributor. They will be compensated with a warranty labor rate of \$45.00 per hour.
- 3) Parts repaired or replaced under this warranty are warranted only during the balance of the original warranty period. All defective parts replaced under these warranties become the property of Amano Pioneer Eclipse.

WARRANTY SERVICE

To obtain warranty service, take your machine and proof of purchase to any authorized Amano Pioneer Eclipse Distributor. Amano Pioneer Eclipse will not reimburse expenses for service calls or travel. For the Distributor in your area, call Amano Pioneer Eclipse Customer Service Department at 800-367-3550 or 1-336-372-8080. If you are dissatisfied with the service that you receive, call or email at apeccs@pioneer-eclipse.com for further assistance.

INSTRUCTIONS AND CONDITIONS FOR WARRANTY REIMBURSEMENT

- Order replacement part: Orders will be processed and charged, as normal procedure.
- Call APEC for R/A number.
- You will need the Engine Serial Number, Machine Serial Number, and the Machine Model Number.
- Parts must be returned, accompanied with the R/A number to be eligible for warranty credit.
- All Warranty Parts will be shipped prepaid UPS Ground, any other method will be at the recipients expense.
- Freight on any Warranty Part after 30 days must be paid for by the Purchaser.
- Warranty labor rate is \$45.00 per hour.
- Credit will be issued upon completion of the above steps, at above rates.

DISCLAIMER OF CONSEQUENTIAL

AMANO PIONEER ECLIPSE DISCLAIMS ANY RESPONSIBILITY FOR LOSS OF USER TIME OF THE AMANO PIONEER ECLIPSE MACHINE OR ANY OTHER INCIDENTAL OR CONSEQUENTIAL DAMAGE EXCEPT AS STATED IN THE WARRANTY APPLICABLE TO EACH MACHINE. EXCEPT AS STATED IN SUCH WARRANTIES, THE COMPANY DOES NOT OTHERWISE WARRANT ANY MACHINE AND NO WARRANTY, EXPRESS, IMPLIED OR STATUTORY IS MADE BY THE COMPANY.

Copyright 2012 Amano Pioneer Eclipse Corporation



Amano Pioneer Eclipse Corporation

1 Eclipse Rd • PO Box 909
Sparta, North Carolina 28675 • USA
www.pioneer-eclipse.com

+1-336-372-8080
1-800-367-3550
Fax 1-336-372-2913